



Quick fixings


Note: The fixings may be damaged when they are removed. It is preferable to replace them for quality reasons, even if they may be retained.

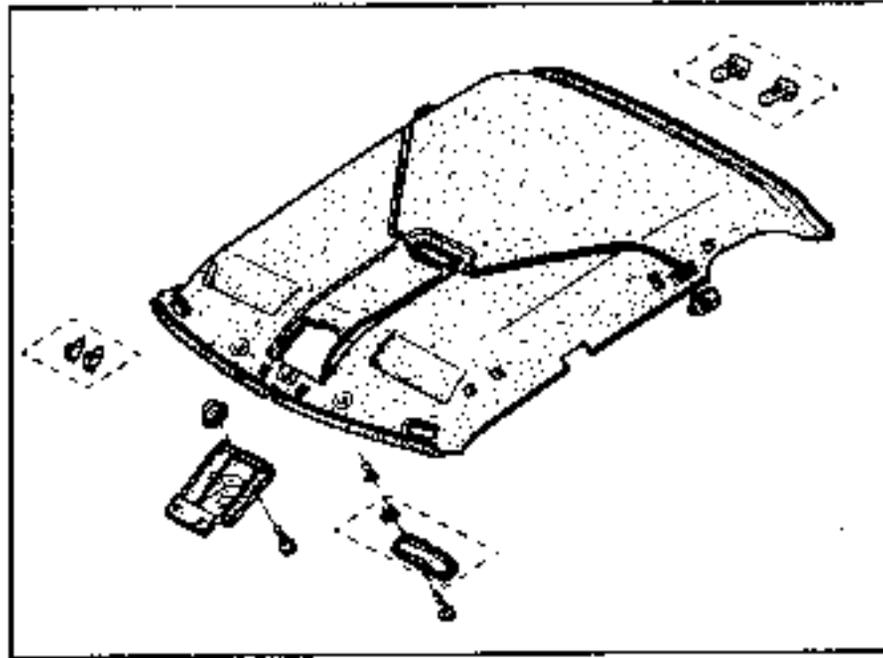


REMOVAL

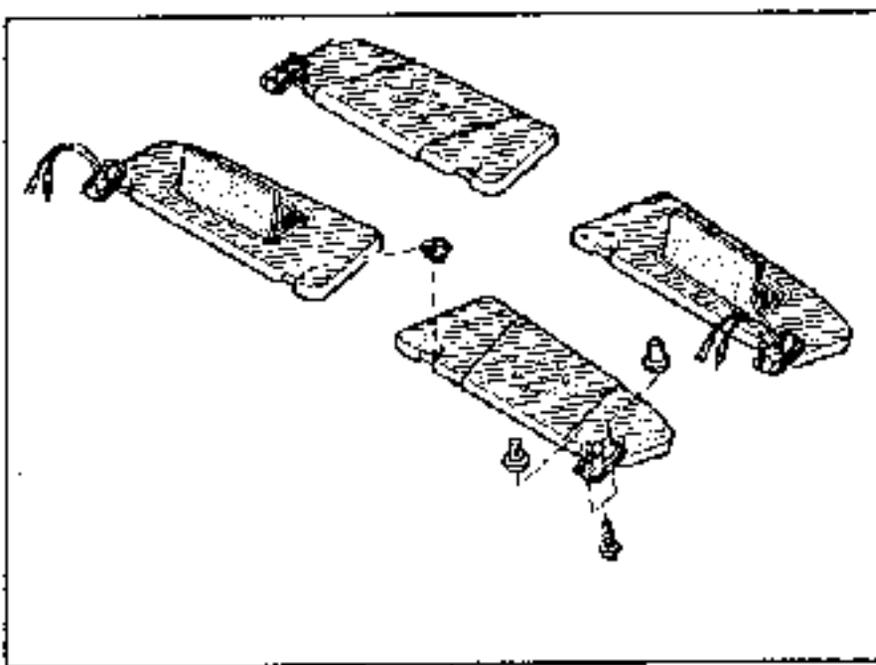


Remove the left and right hand side sun visors and their mountings.

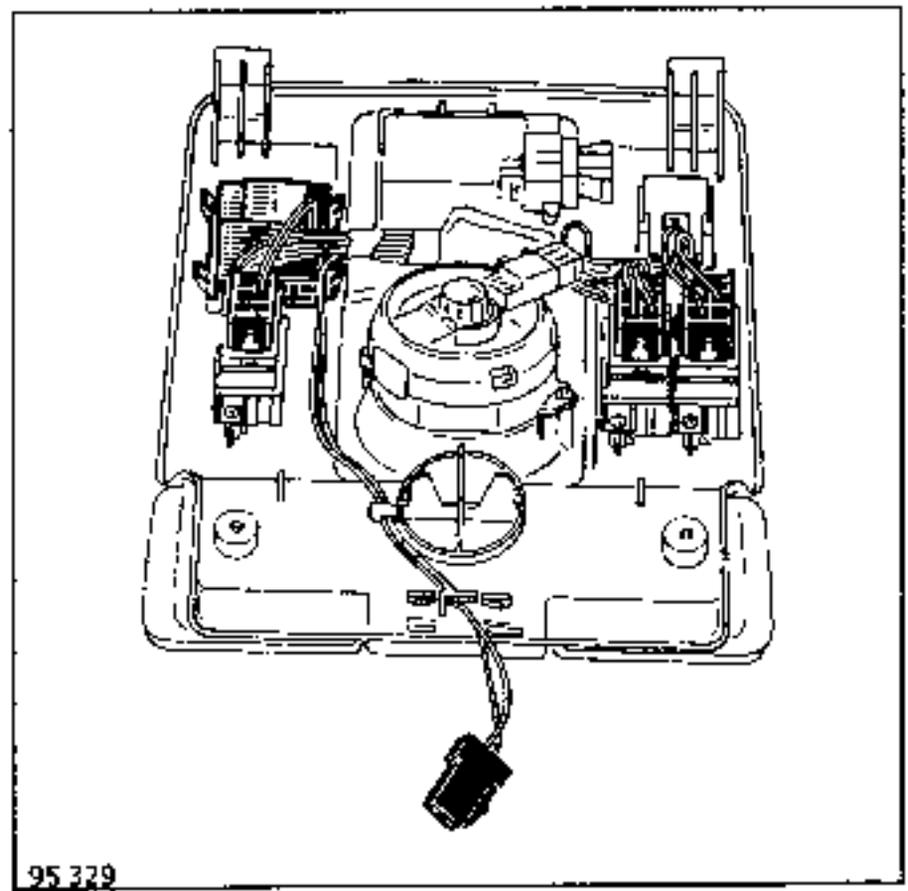

Remove the roof console.

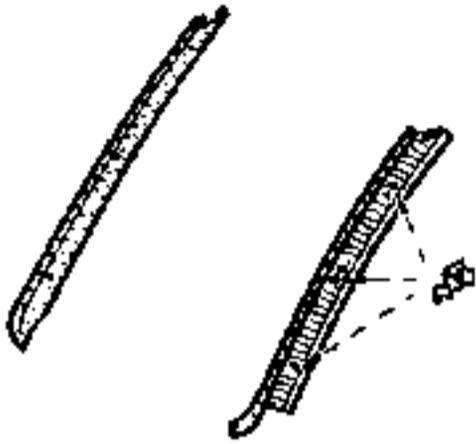


Remove the windscreen mounting trim.

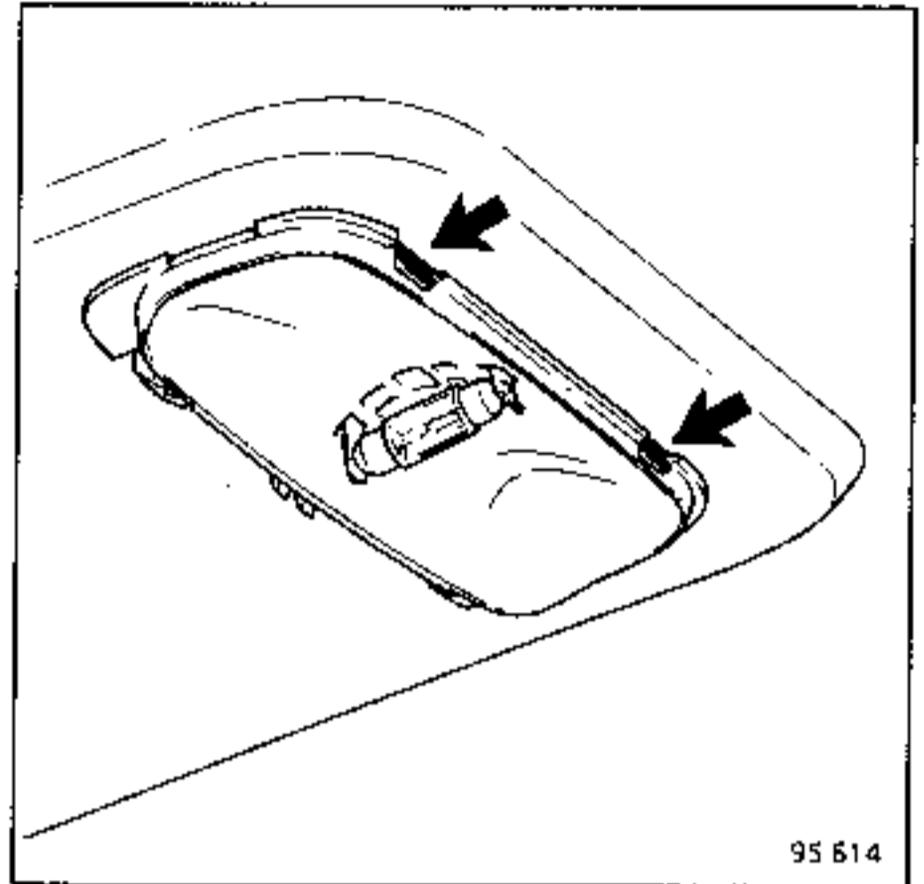


95 614

Remove the grab handles and the central courtesy light.

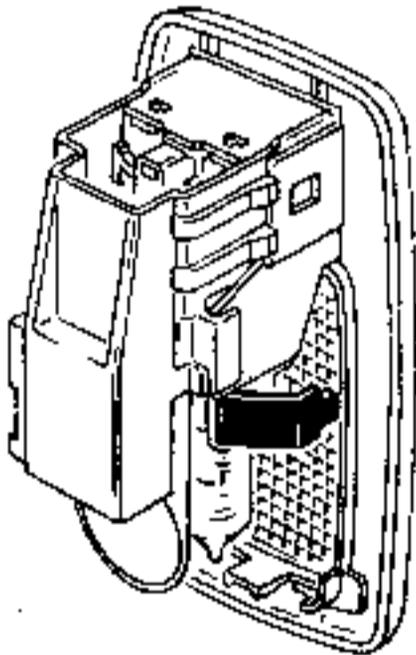


95 333

Depending on version, remove the side courtesy lights.

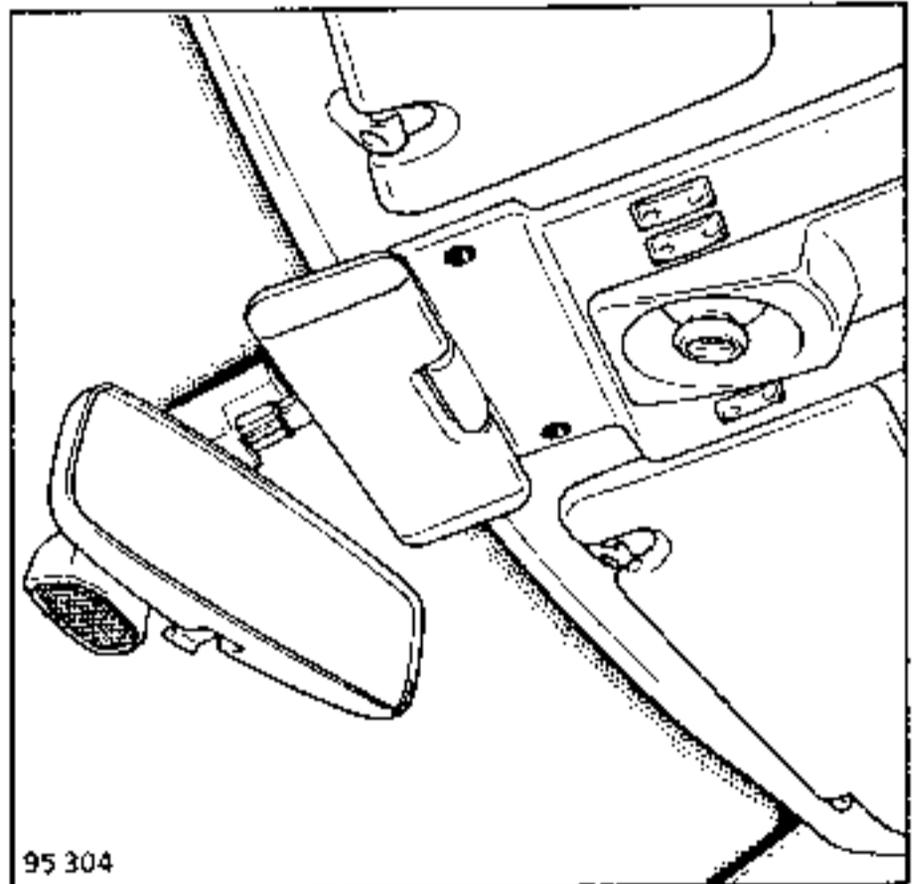


95 304


Remove the interior rear view mirror casing.

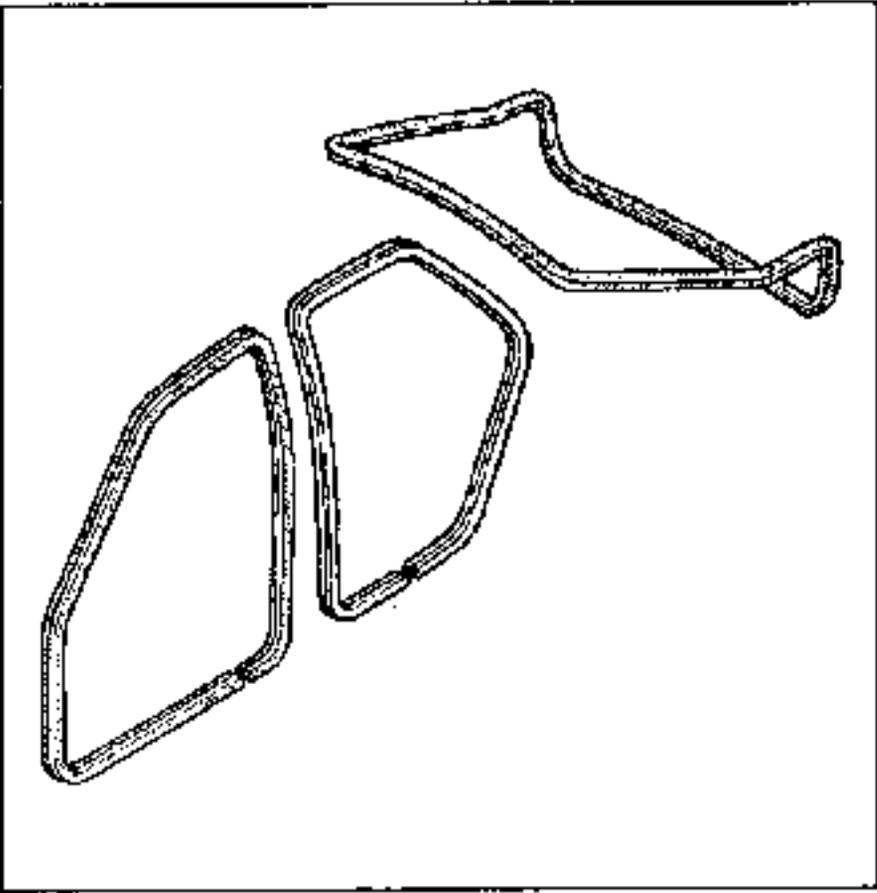


Remove the door and tail gate seals

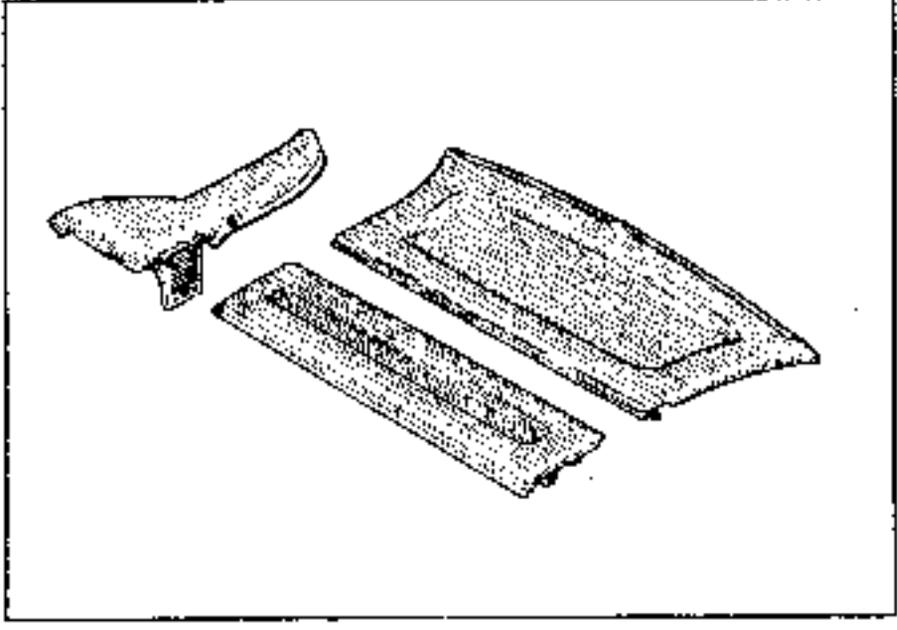

Remove the various rear shelves.

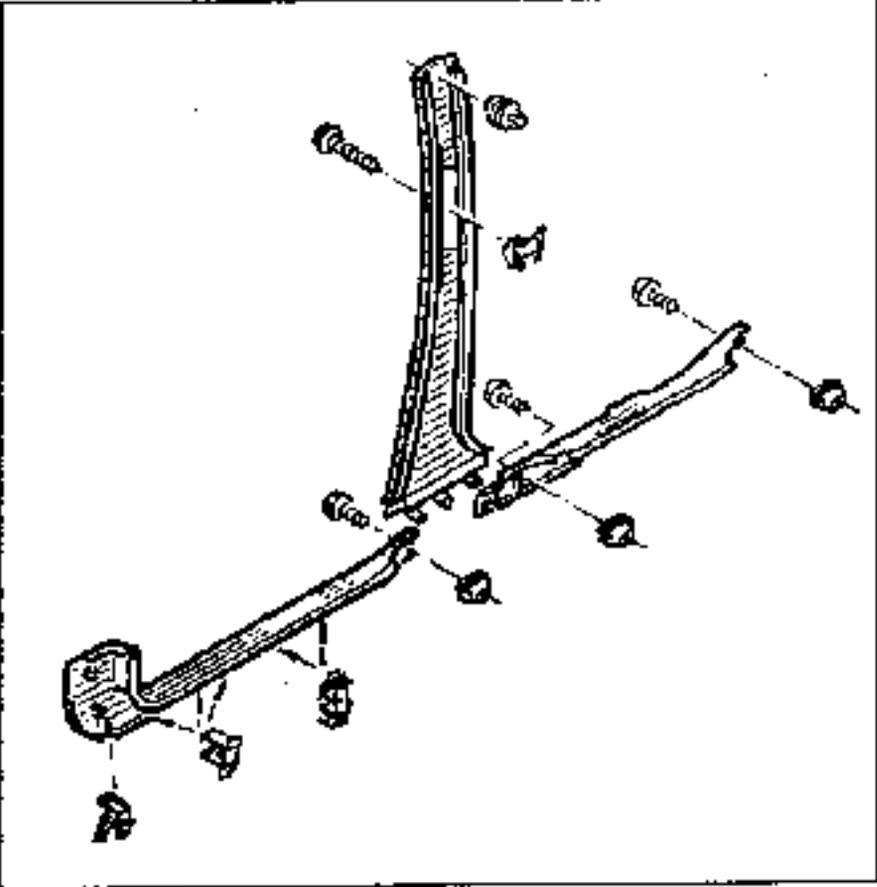


Remove the right and left hand centre pillar trim.

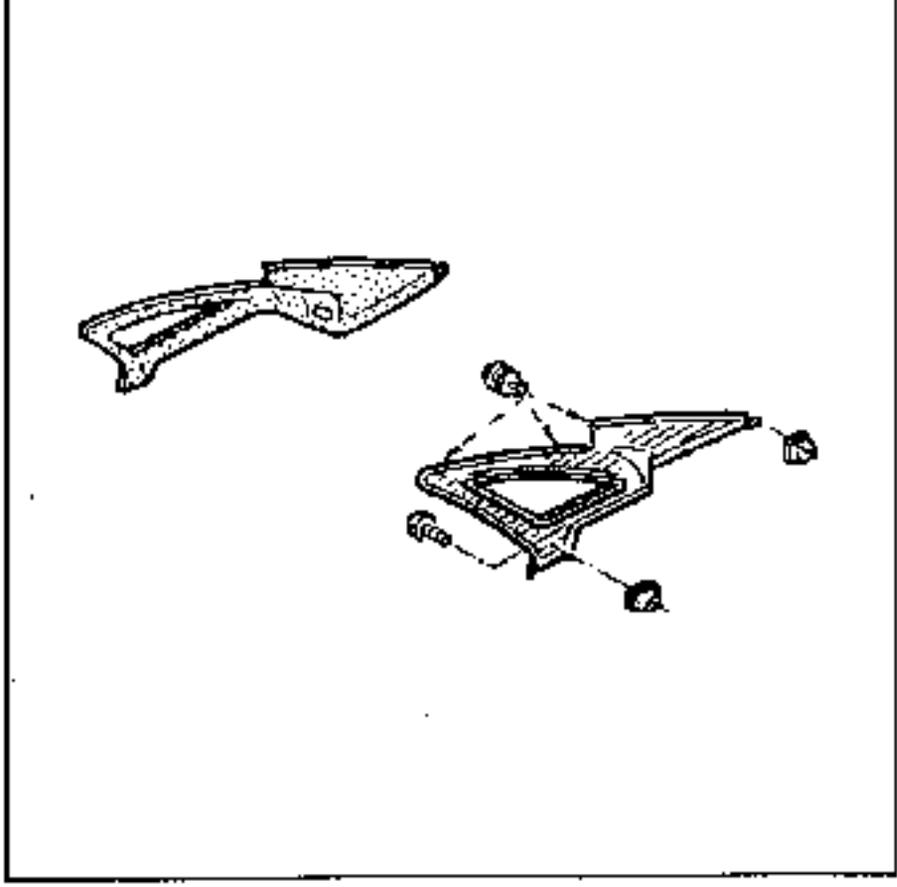

- Remove:
- the right and left hand rear quarter panel trim.
 - (depending on version) the rear screen sun visor mounting.
 - the roof lining using a mastic knife.

Note: For vehicles with a sun roof, the same accessory elements must be removed. The roof lining is fixed with Velcro.

REFITTING

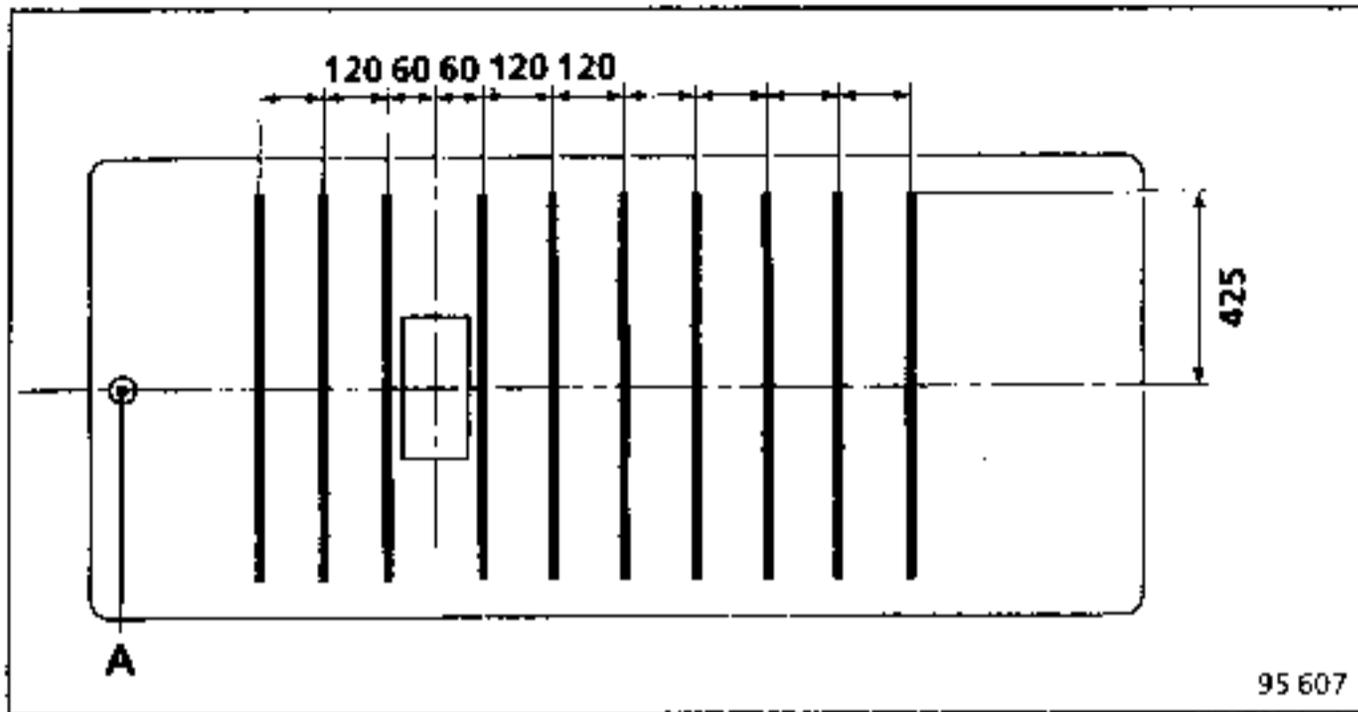


Adhesion zone

After protecting the seats, stick the roof lining in position as shown above.


10 cylindrical beads of adhesive \varnothing 4 mm (single component GURIT adhesive).

Bring the lining in through the tail gate, and centre it using the radio aerial mounting (A).


THIS OPERATION REQUIRES A MINIMUM OF THREE PERSONS.

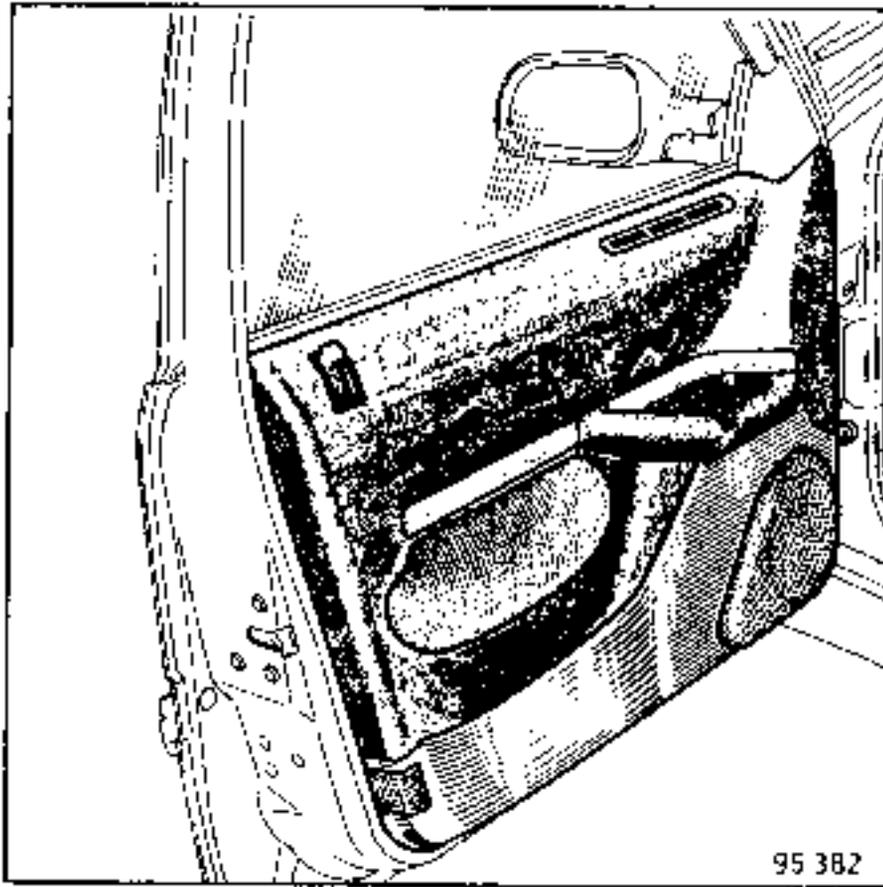


REMOVAL

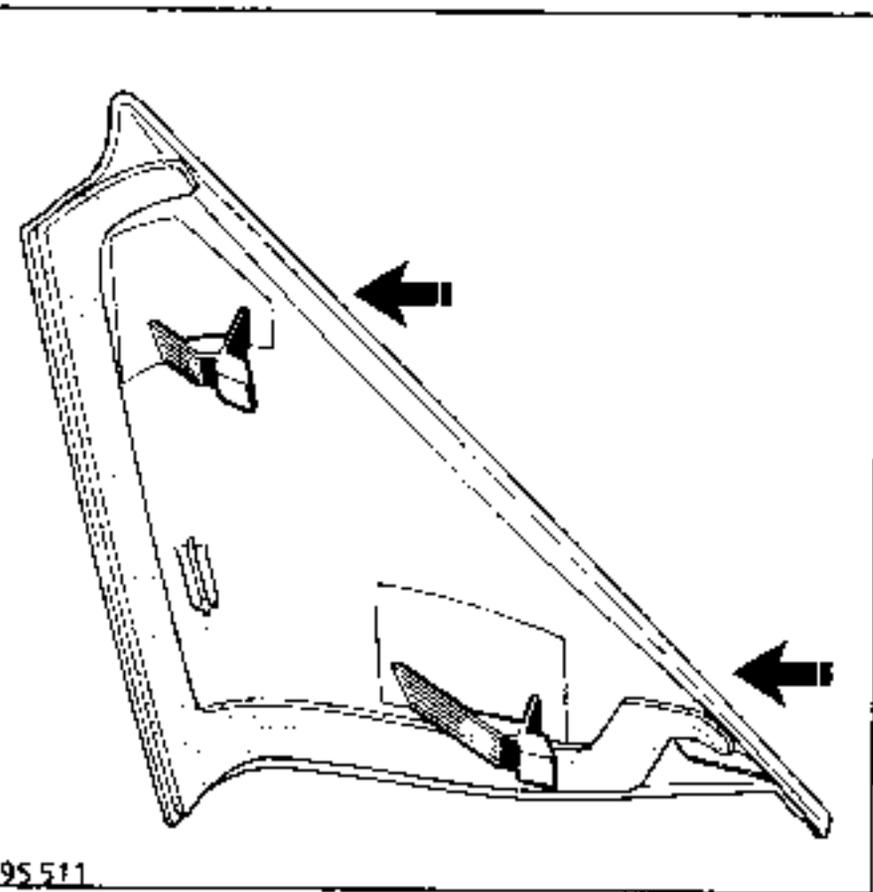


Unclip the rear view mirror mounting cover.

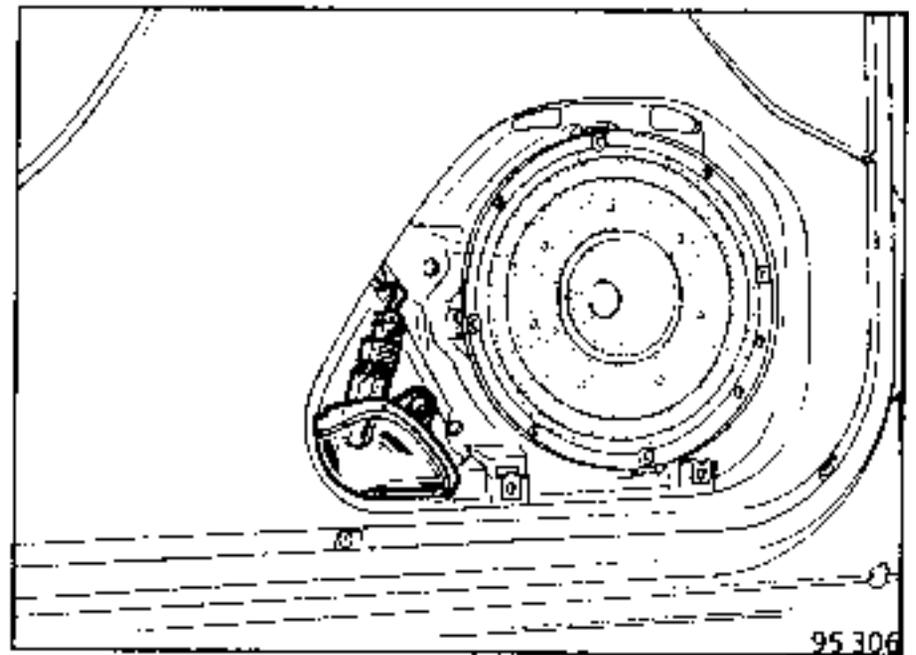


Remove the loudspeaker cover.
Disconnect the ground light.

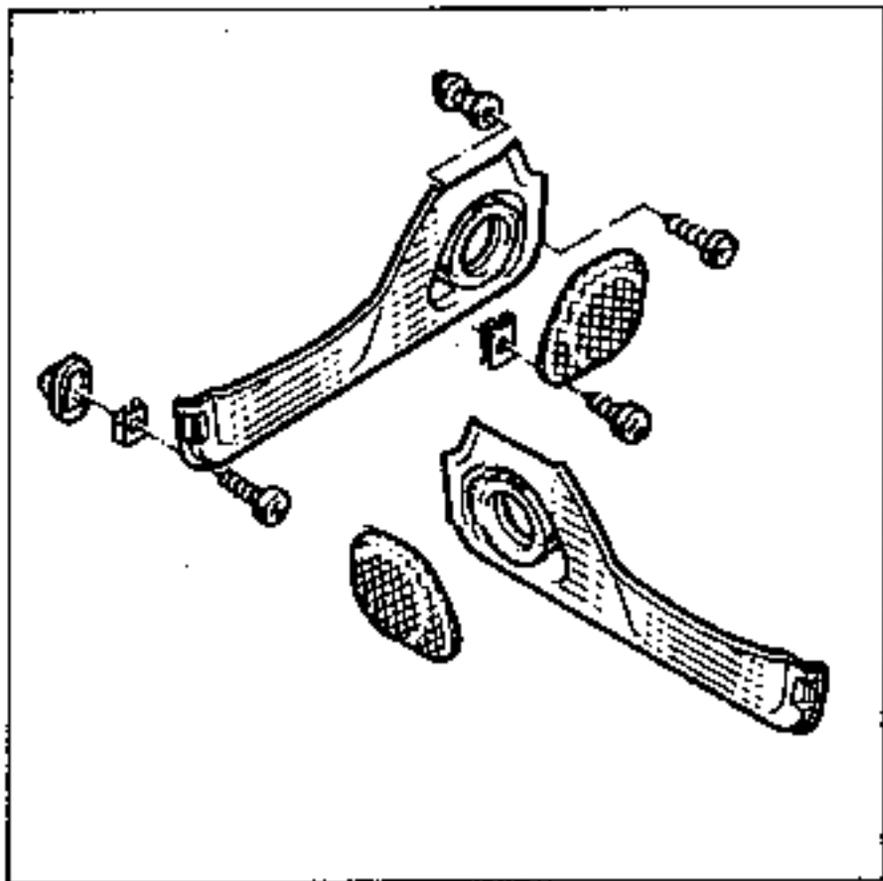


Remove:
- the reflector
- the glove pocket

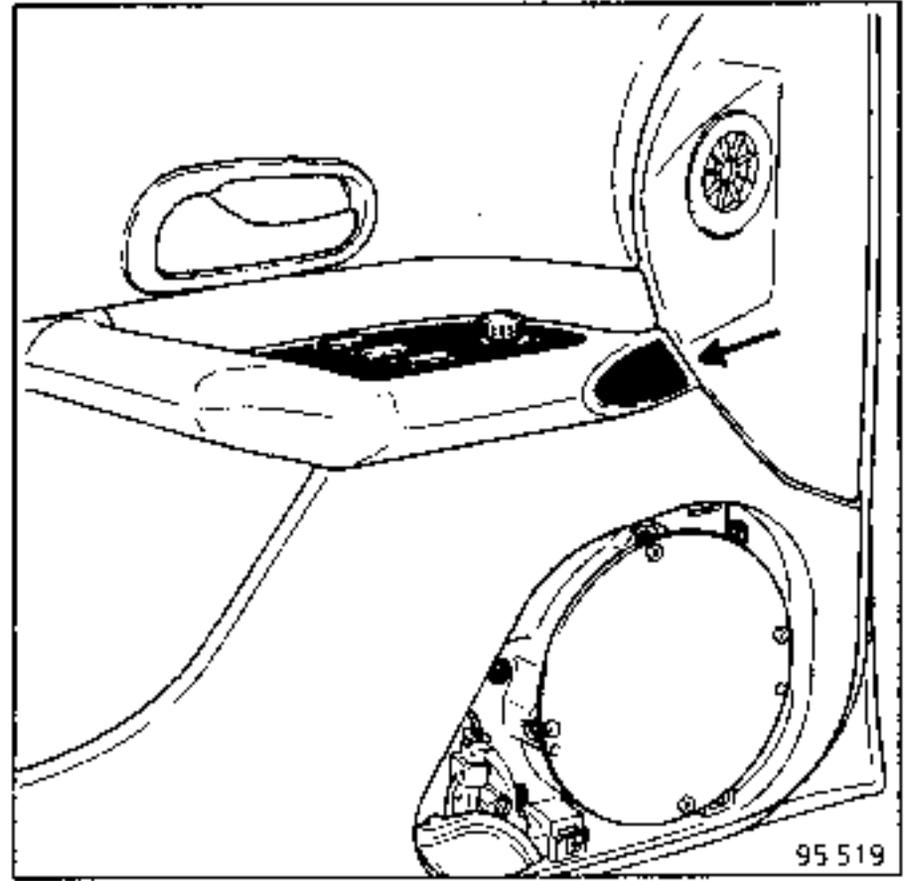



Remove the control plate.
Disconnect the connector.

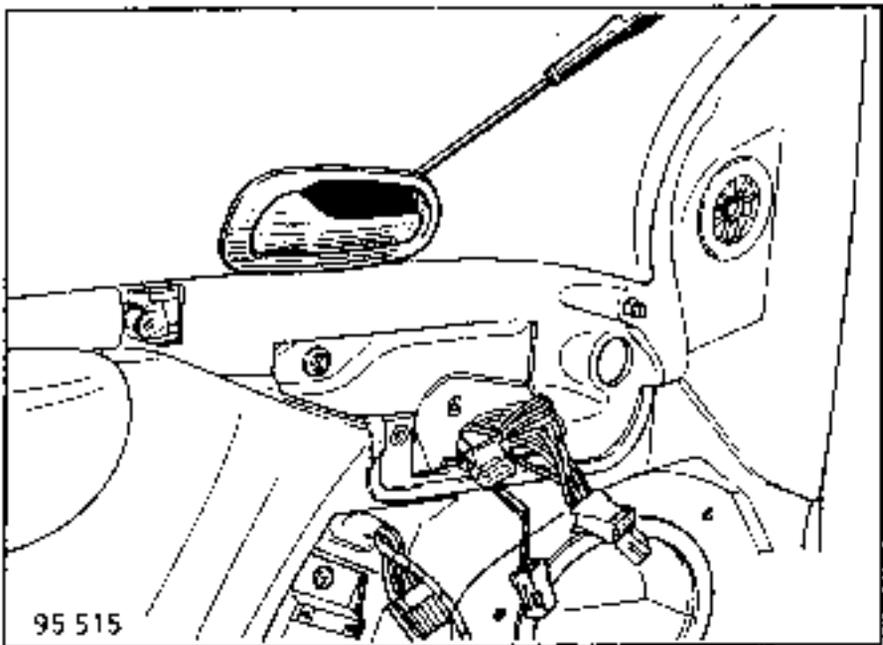

Remove the side handle surround.

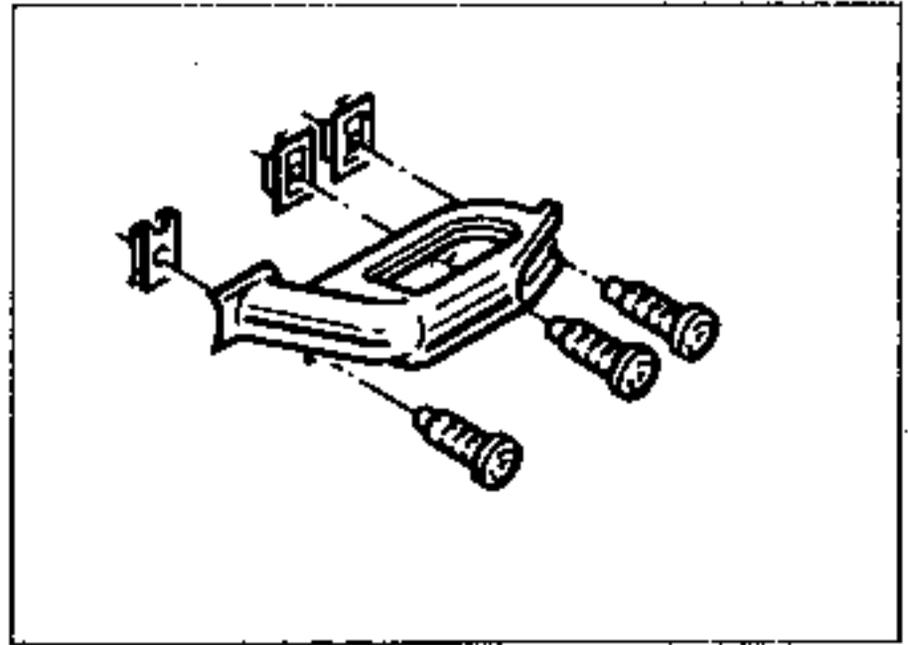


Remove the pull handle

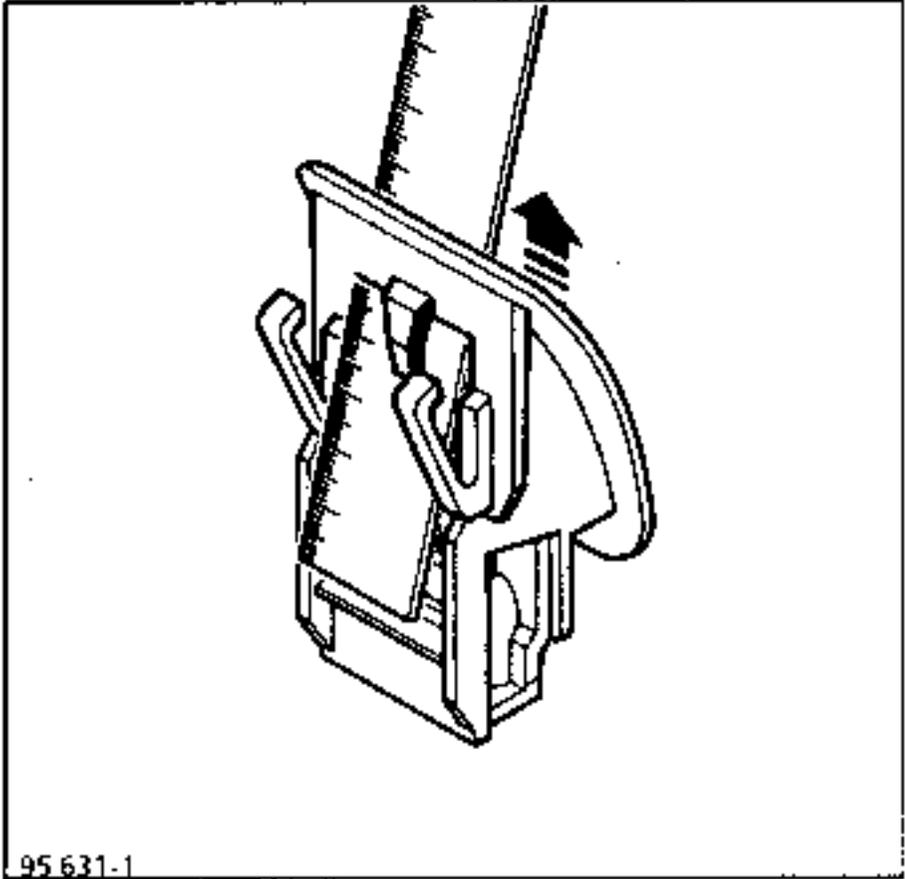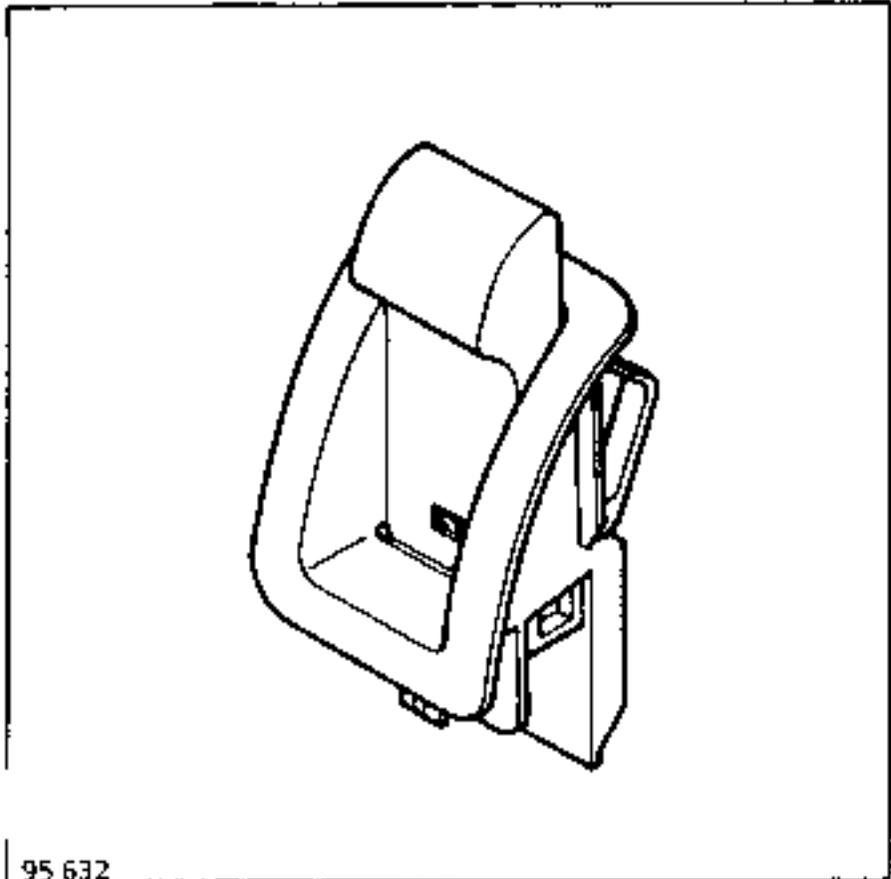


Use a ruler as shown above.

Note: When refitting, lock the lock and before refitting the button, check that the insert is in the bottom hole.


Remove the trim by cutting along the seal.

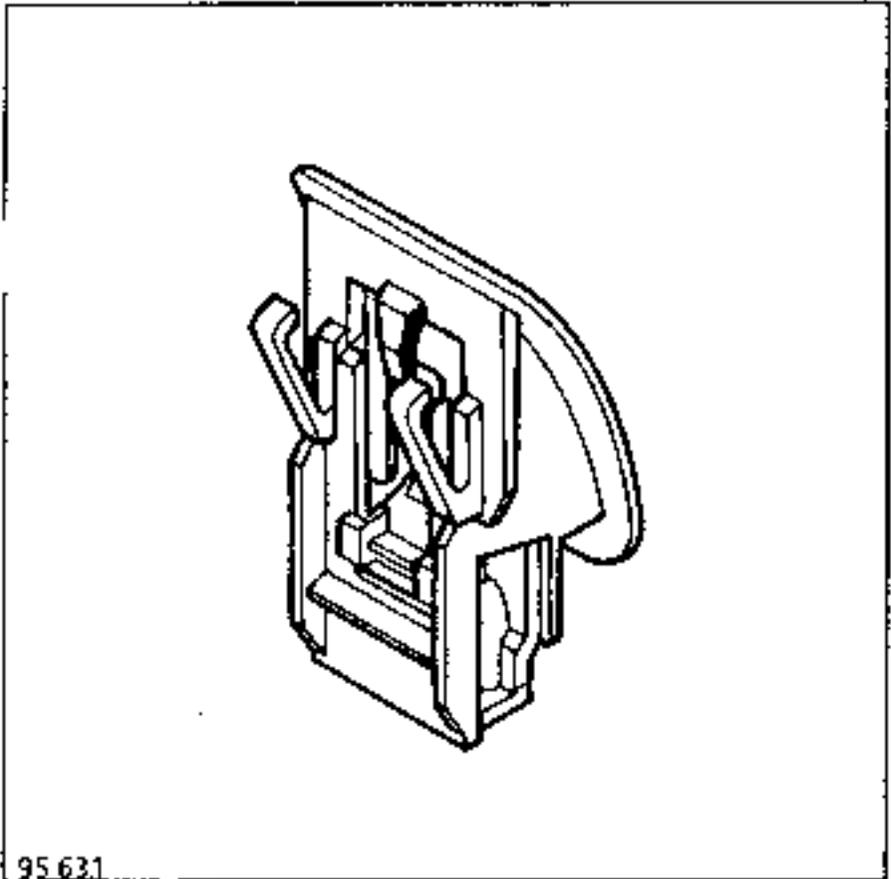


Remove the central locking button (lock closed)

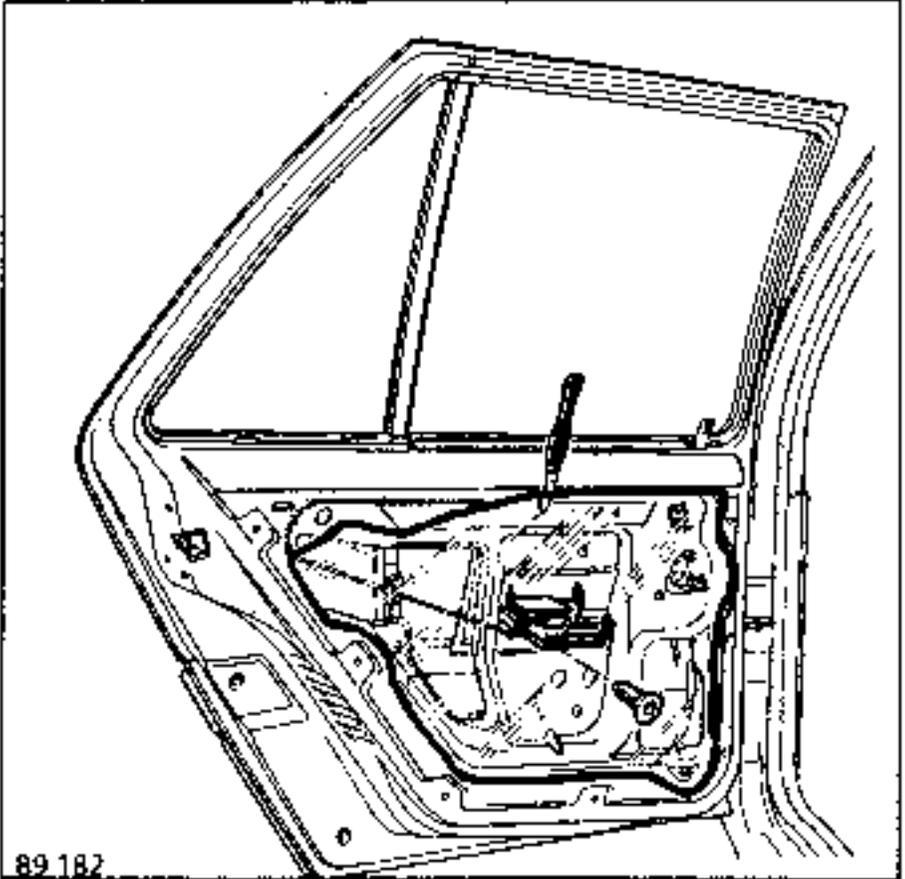

Before replacing the trim, remember to replace the mastic seal.

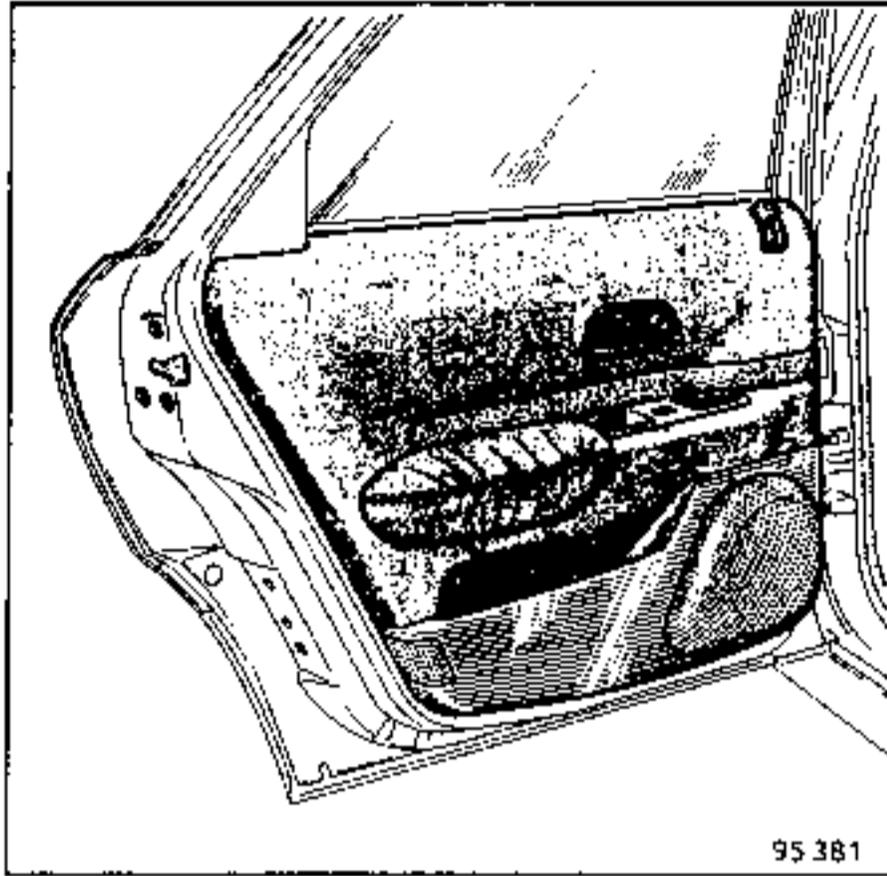


REMOVAL

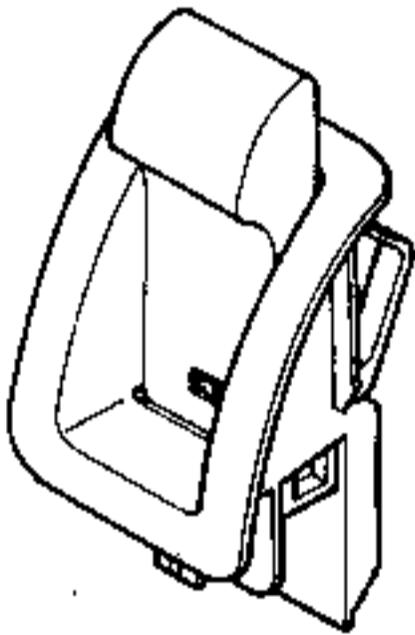


95 632


Remove the central locking button
(as for the front door)

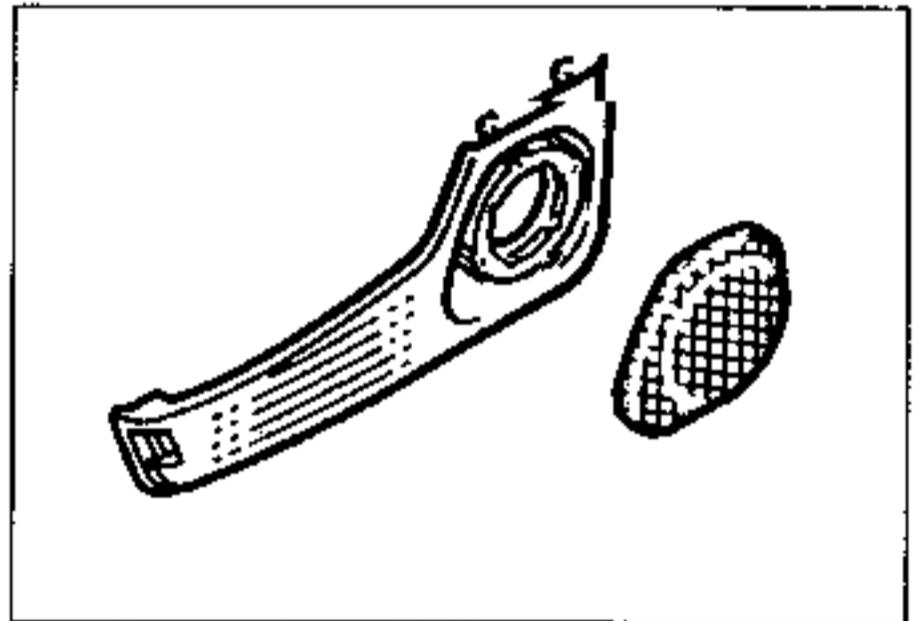


Remove the glove tray

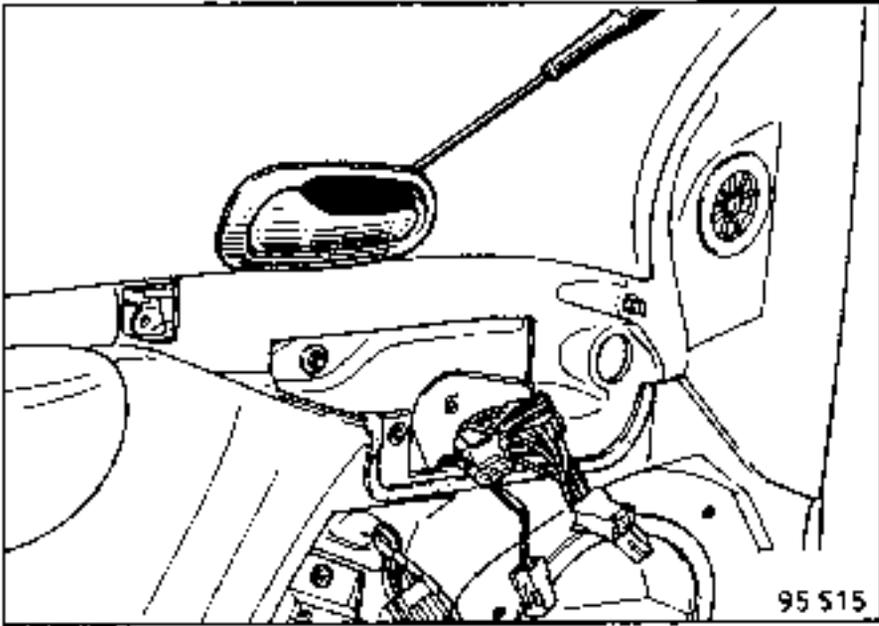


Remove the handle surround.

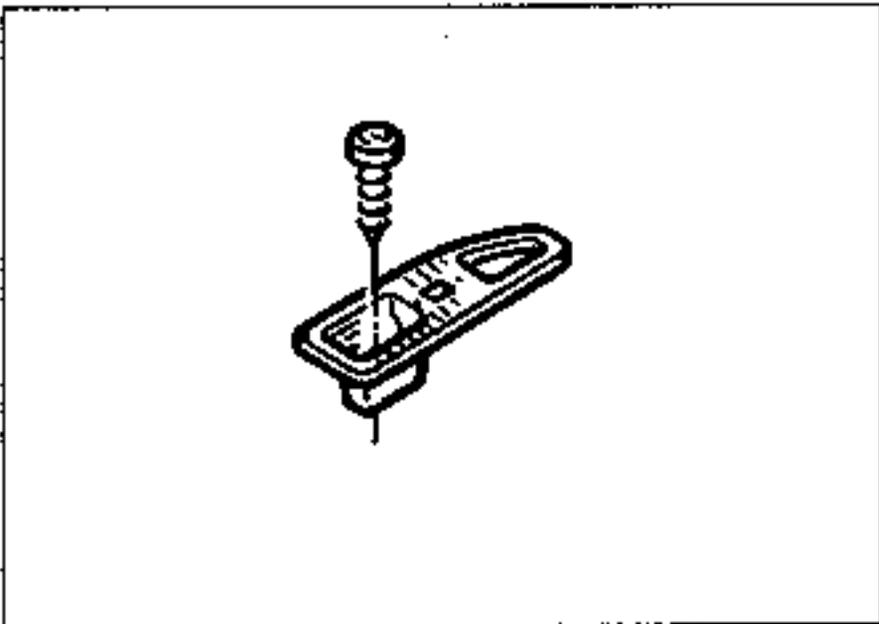


Remove the handle.

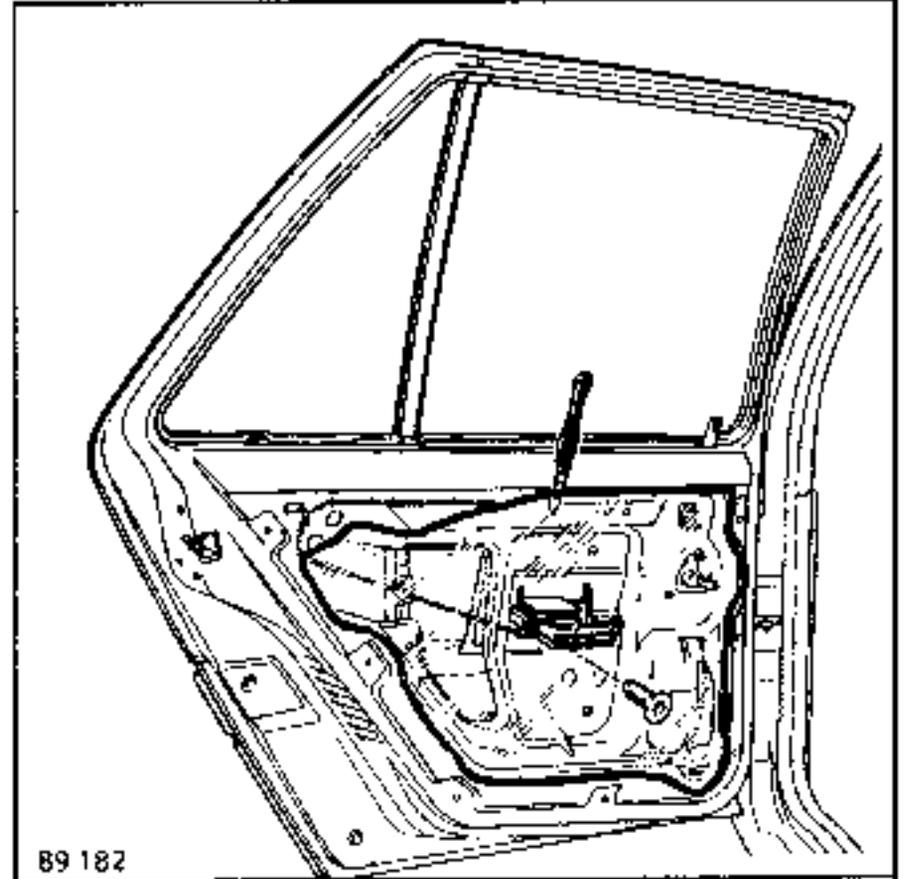


Before refitting the trim, remember to apply a mastic seal.

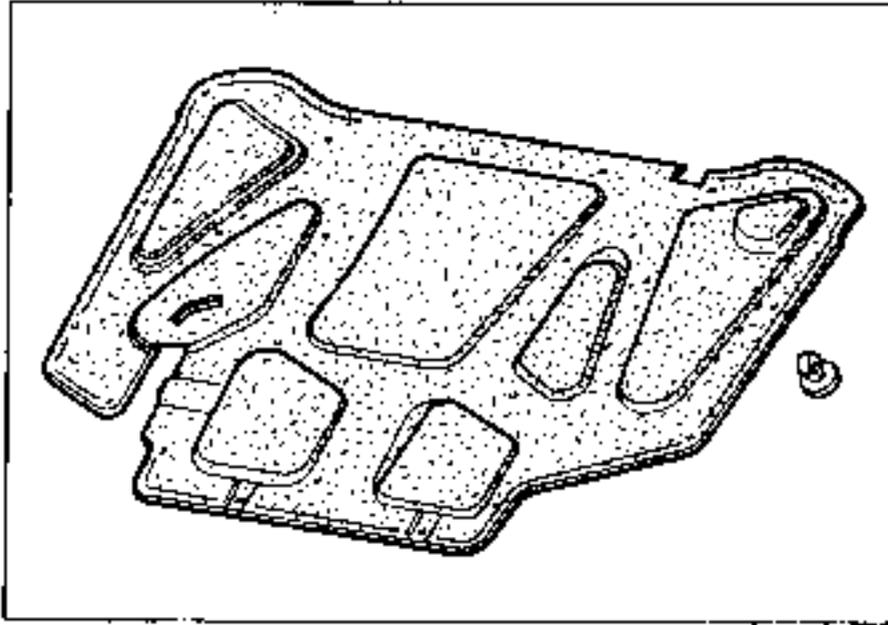


Tail gate trim

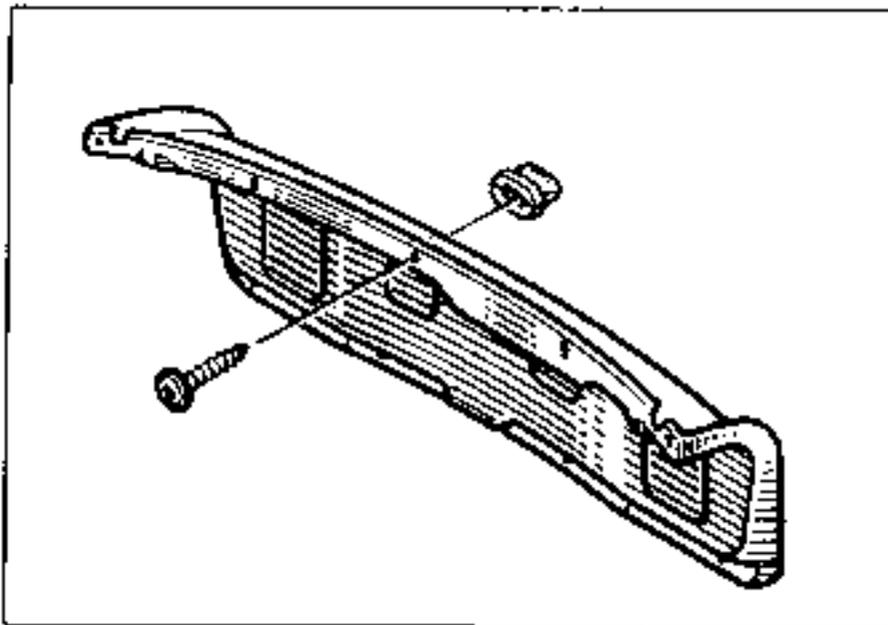


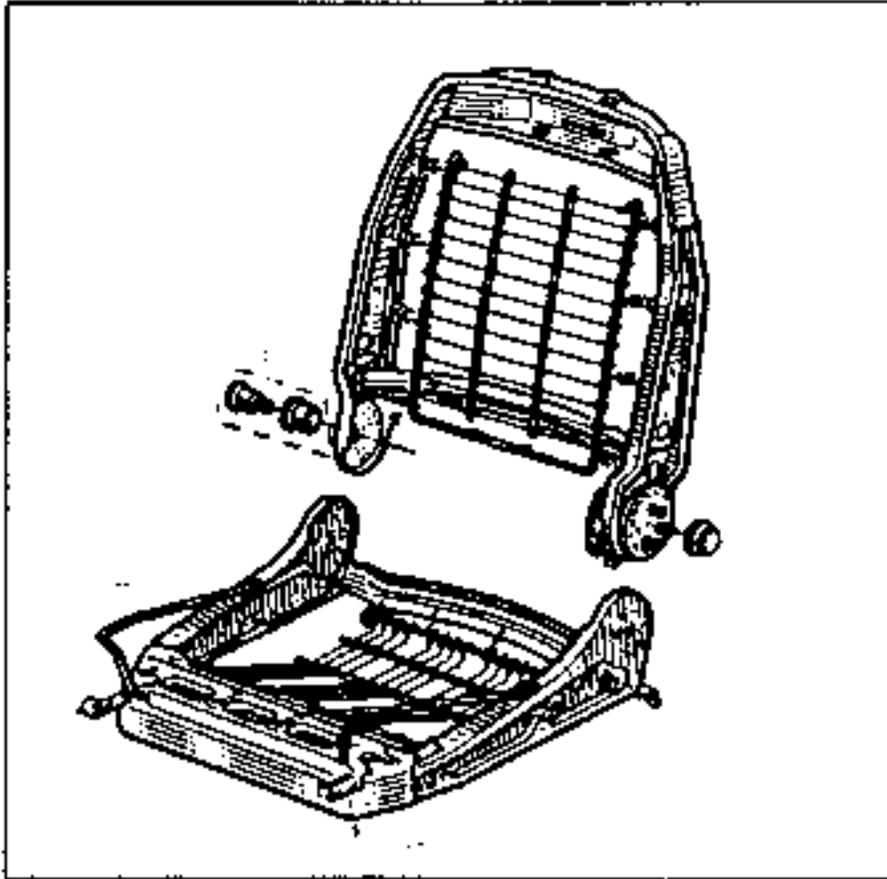


REMOVAL

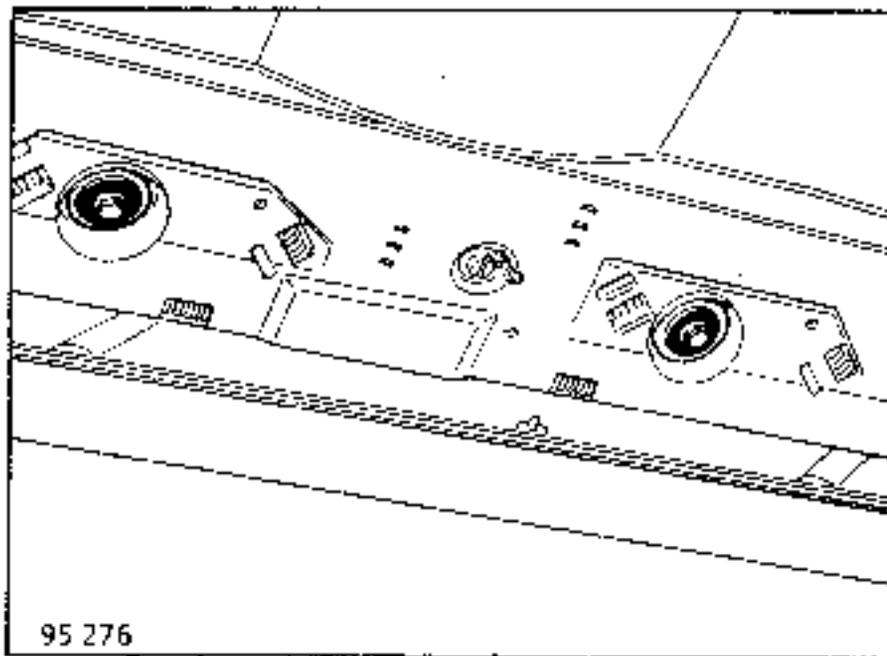

Remove the under-body bolts

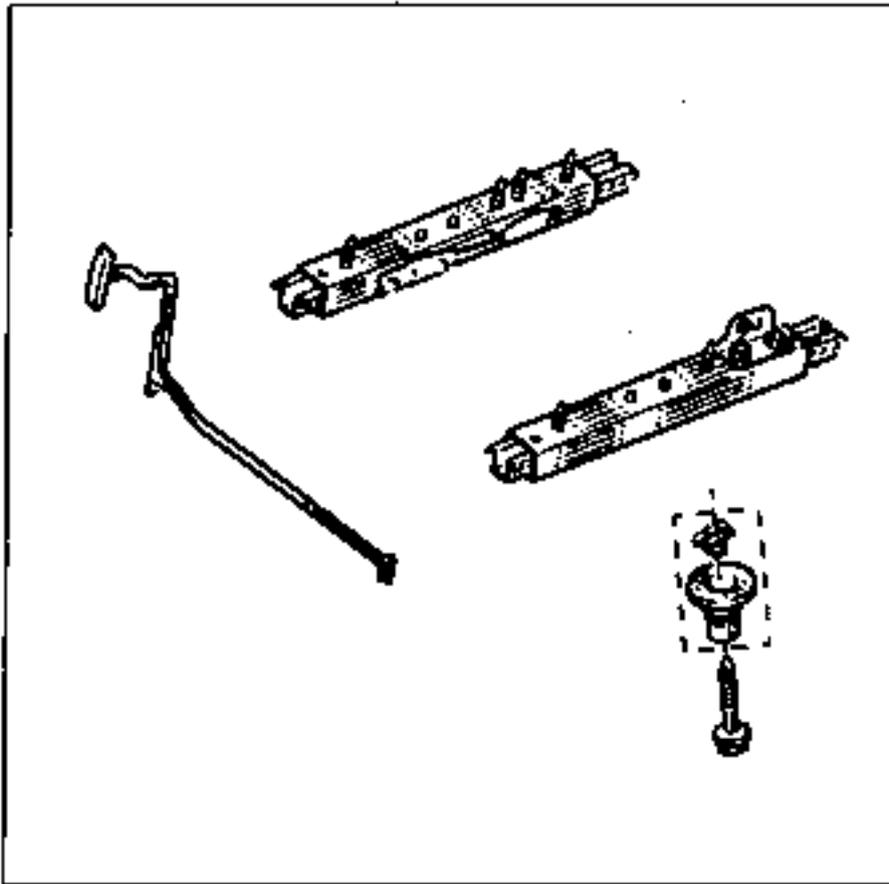


REMOVAL

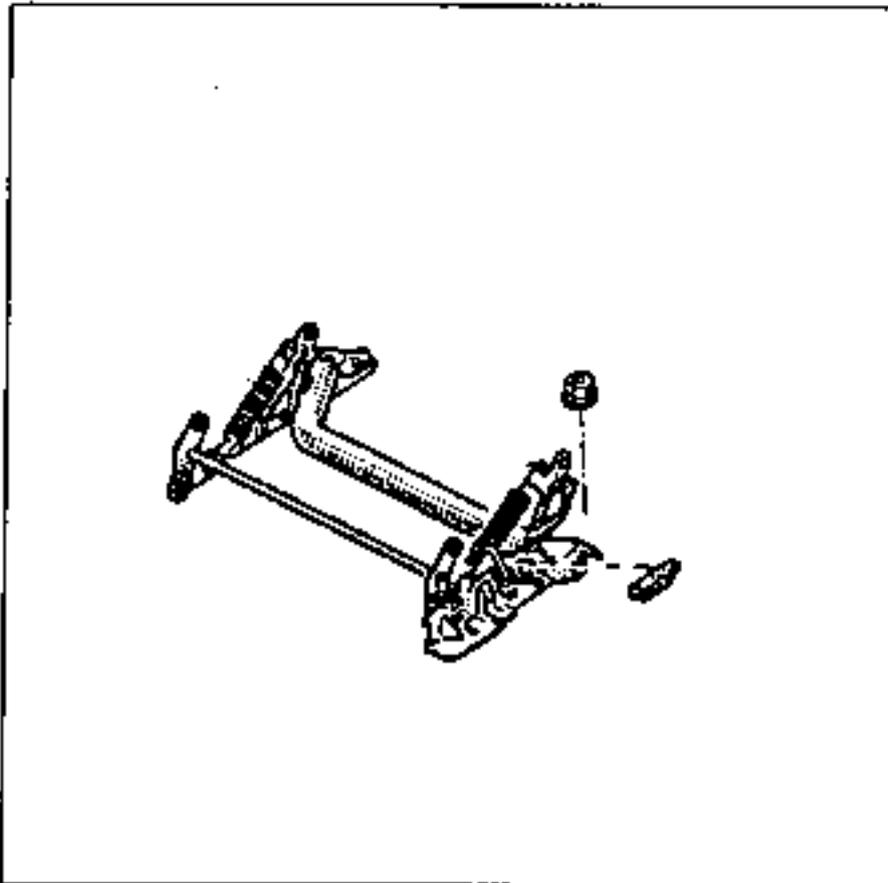


Remove:


- the seat
- the sub-frame mountings

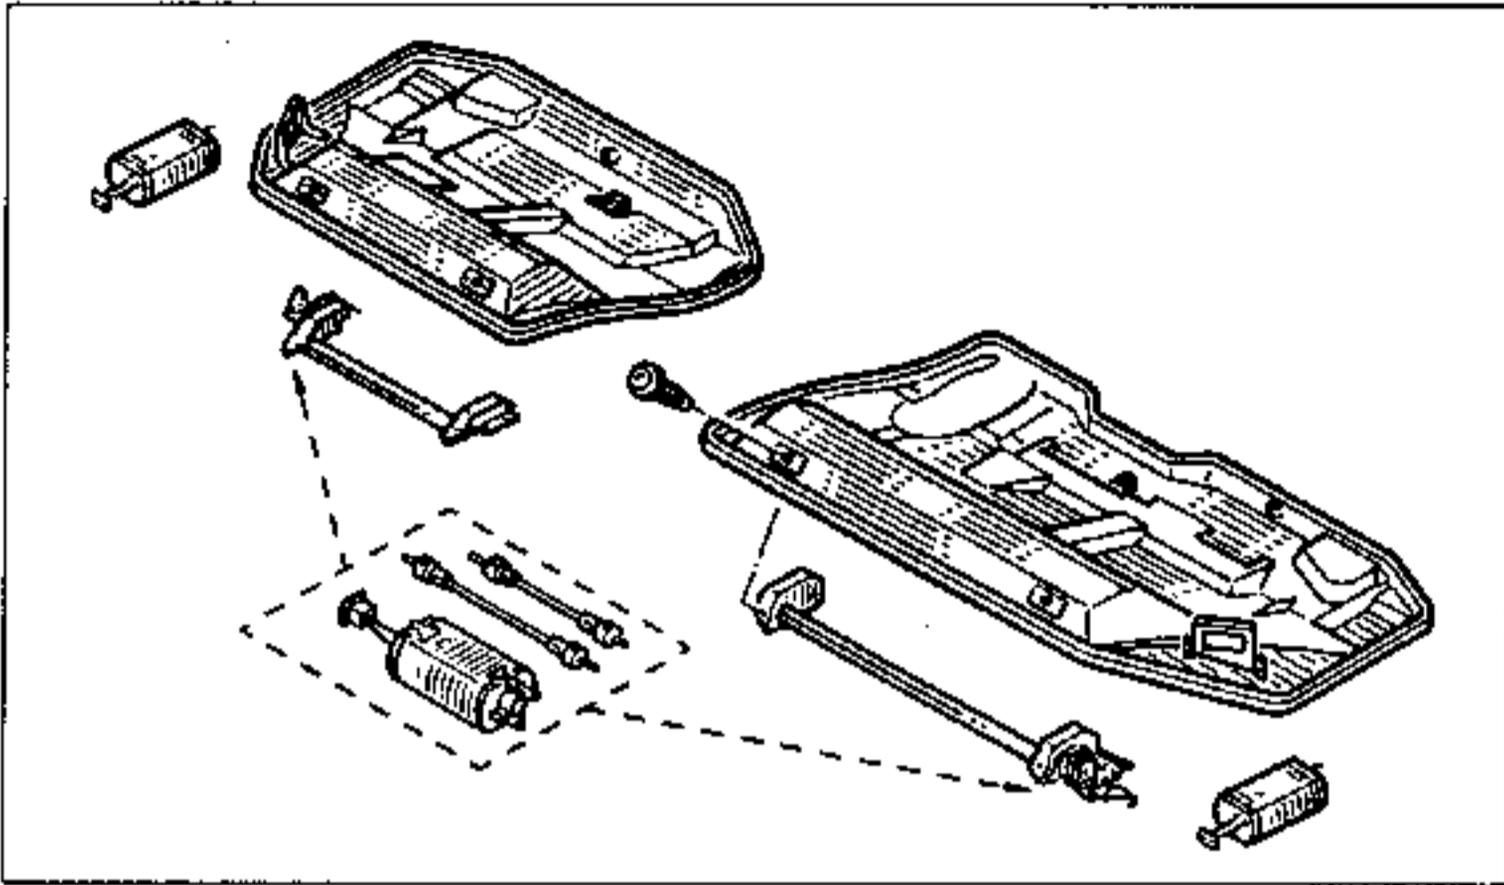


REMOVAL

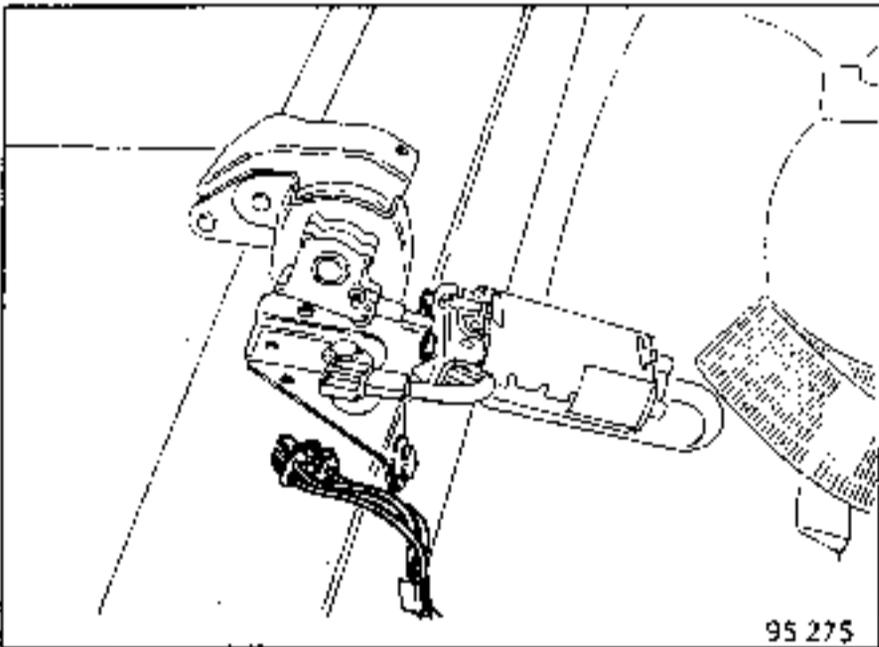


Disconnect the motor connector (when removing with mounting).

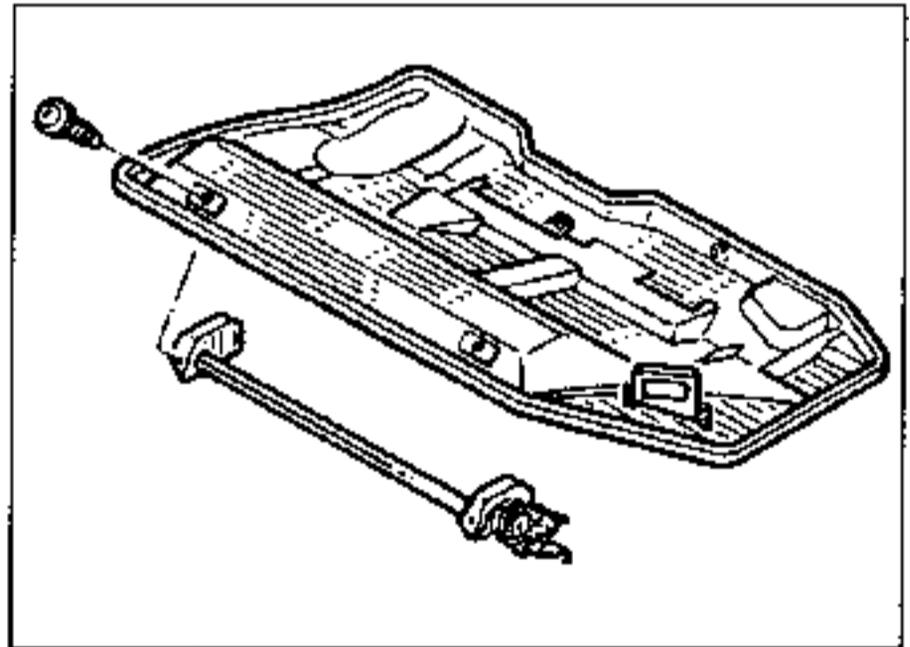


Remove the fixings (4 torx bolts)

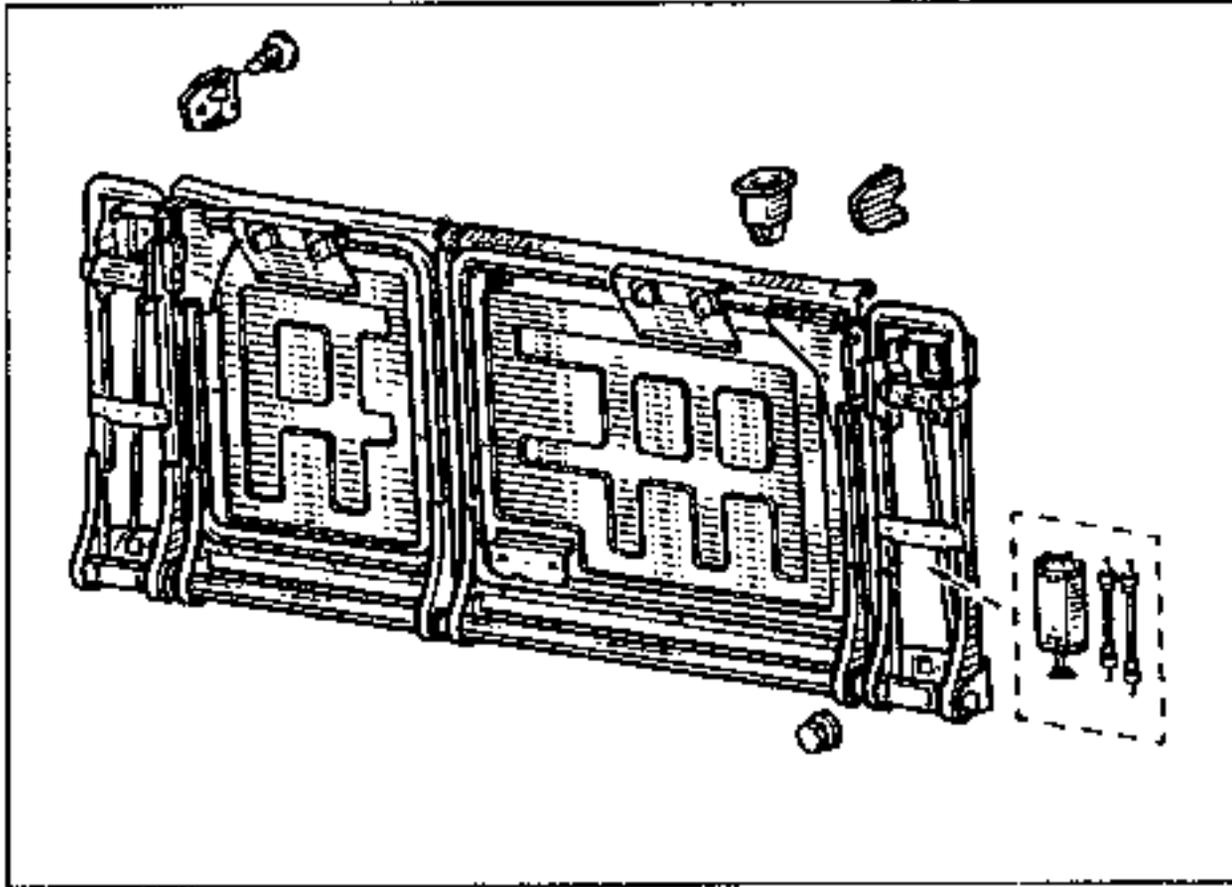


REMOVAL

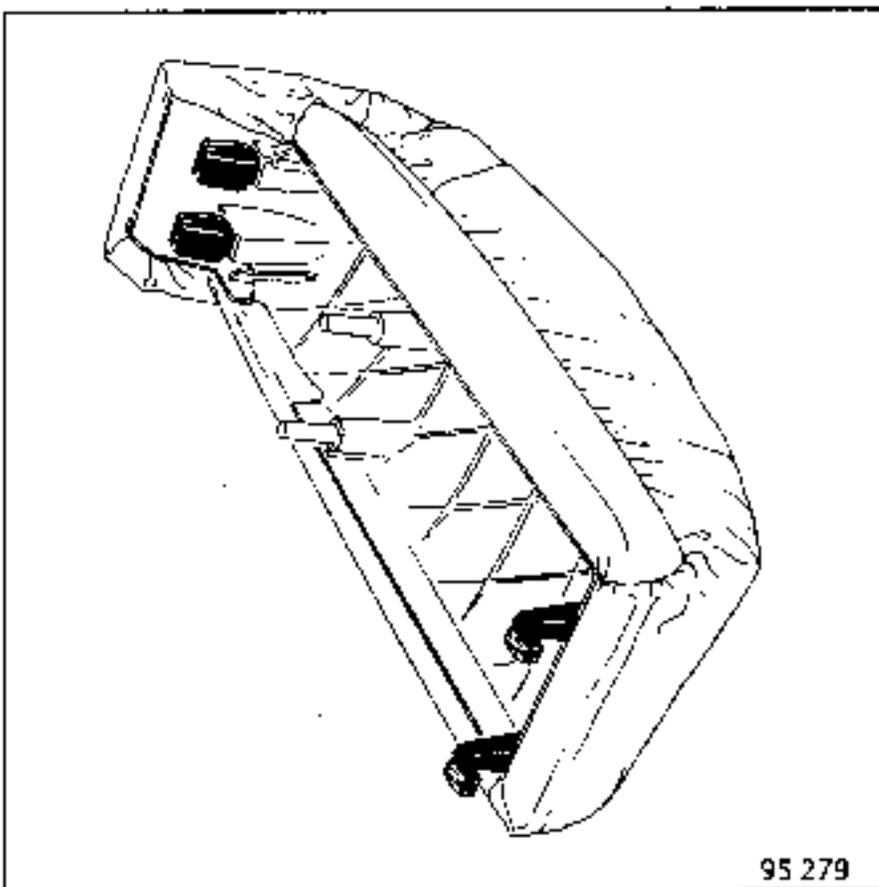


Remove the side arm rests

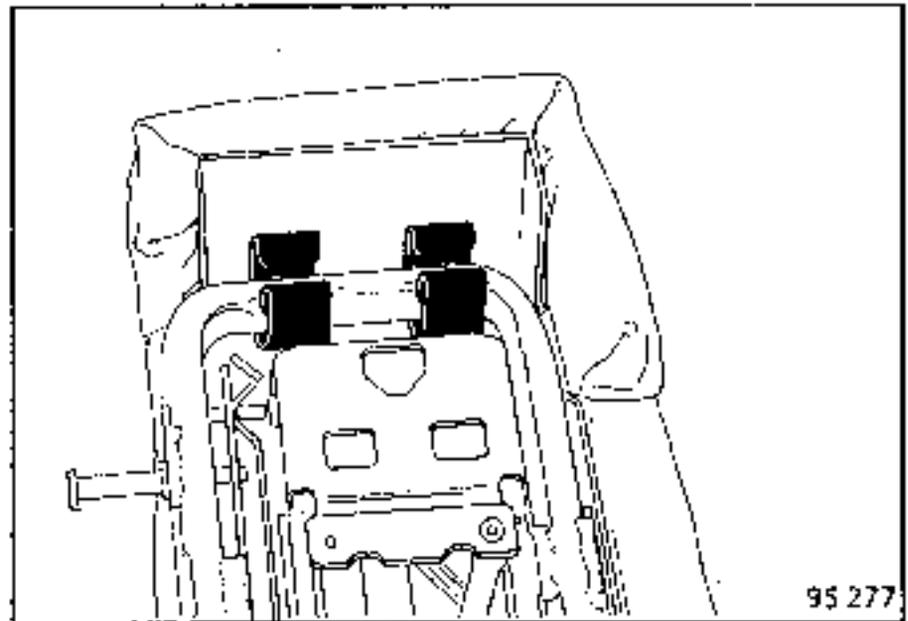


Unclip the upper section

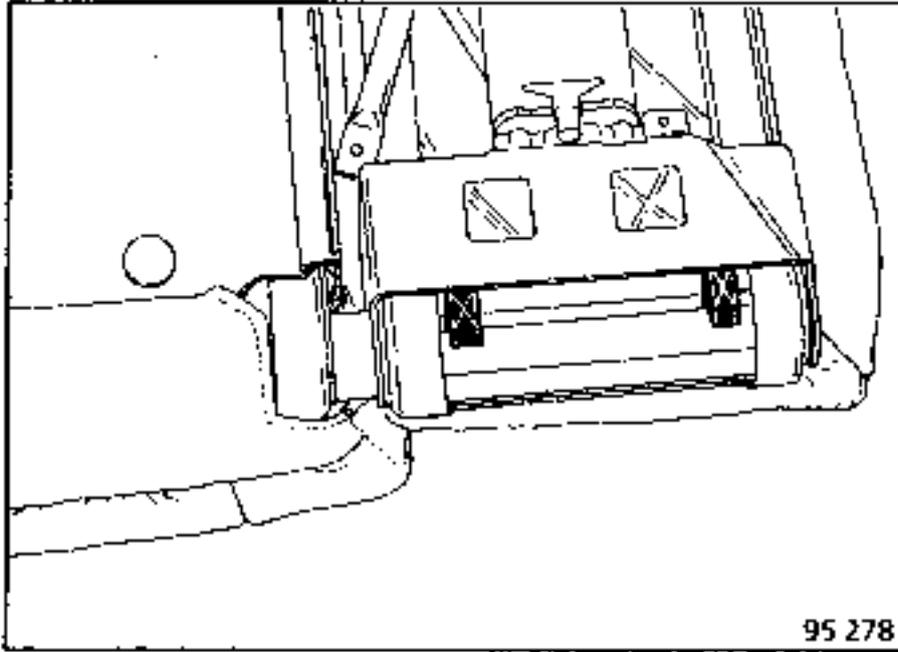


Remove the lower section and remove the arm rest upwards

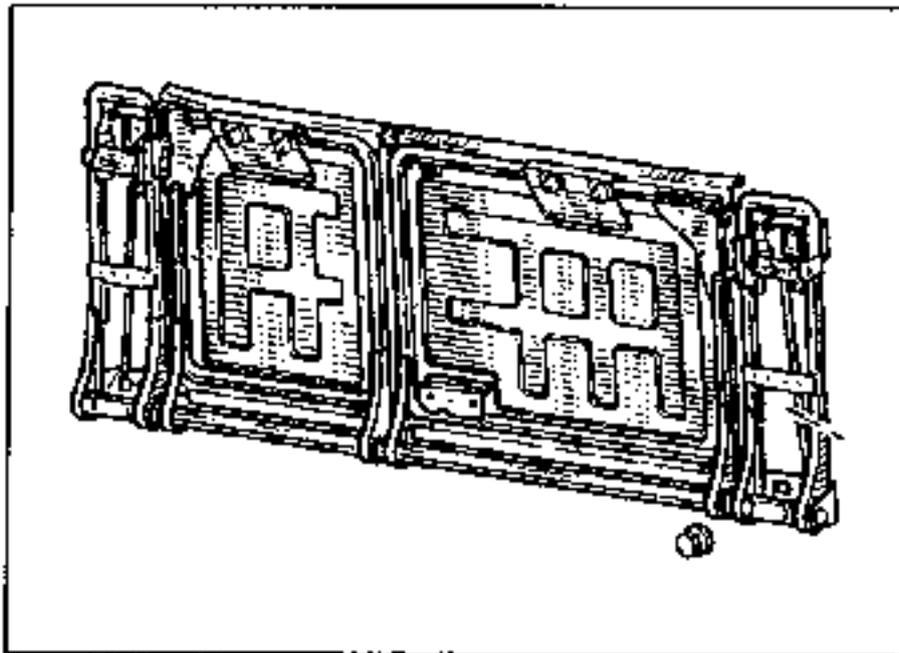


Remove the mounting nuts () and disconnect the motor connections

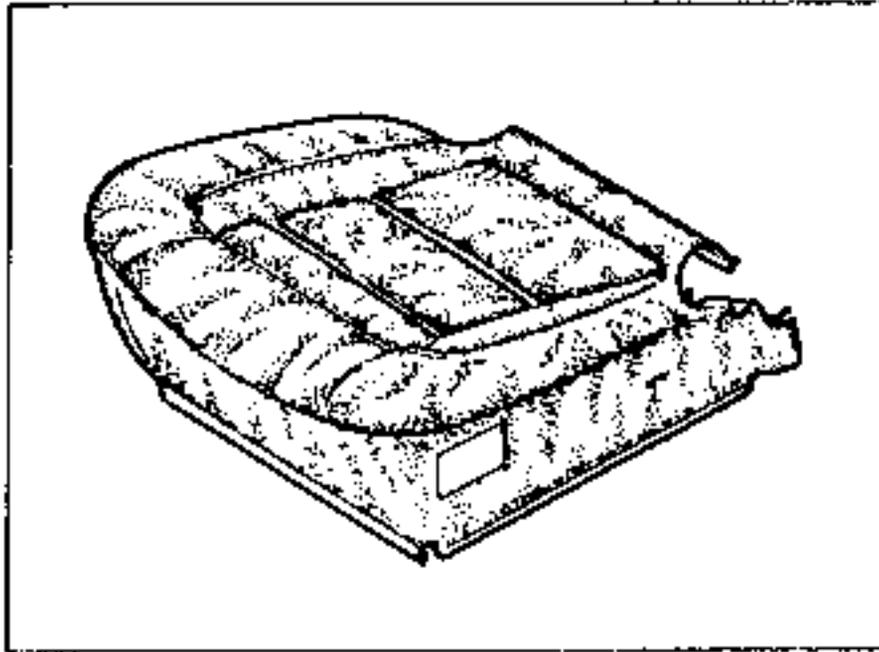


REMOVAL

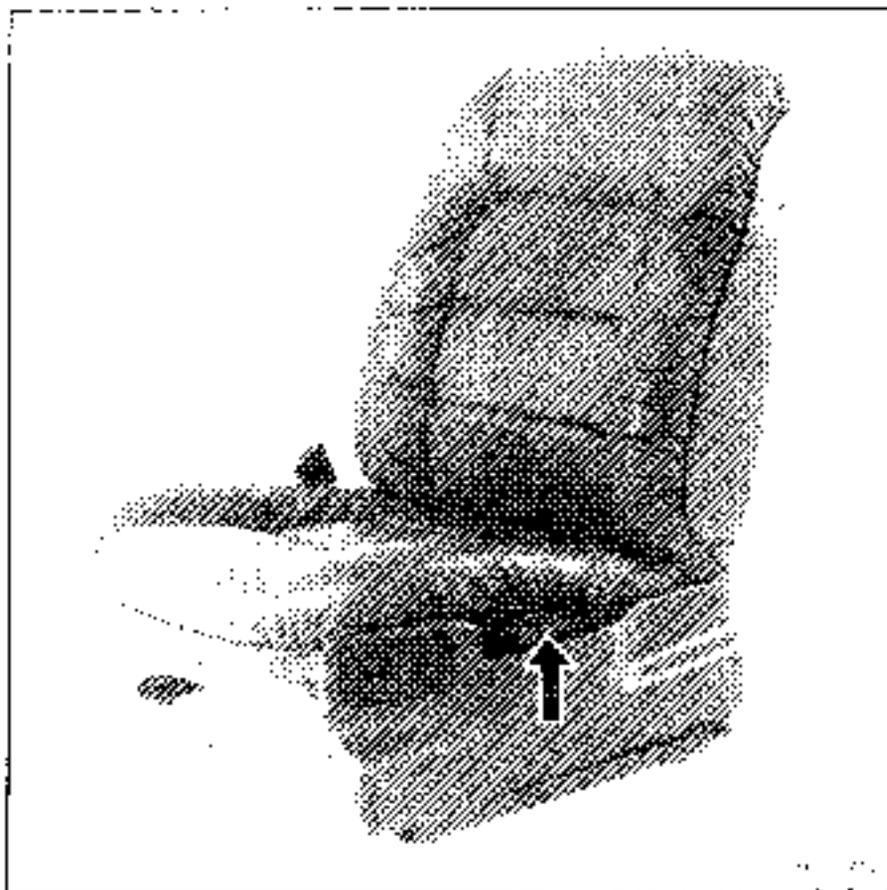


- Remove:
- the seat
 - the controls

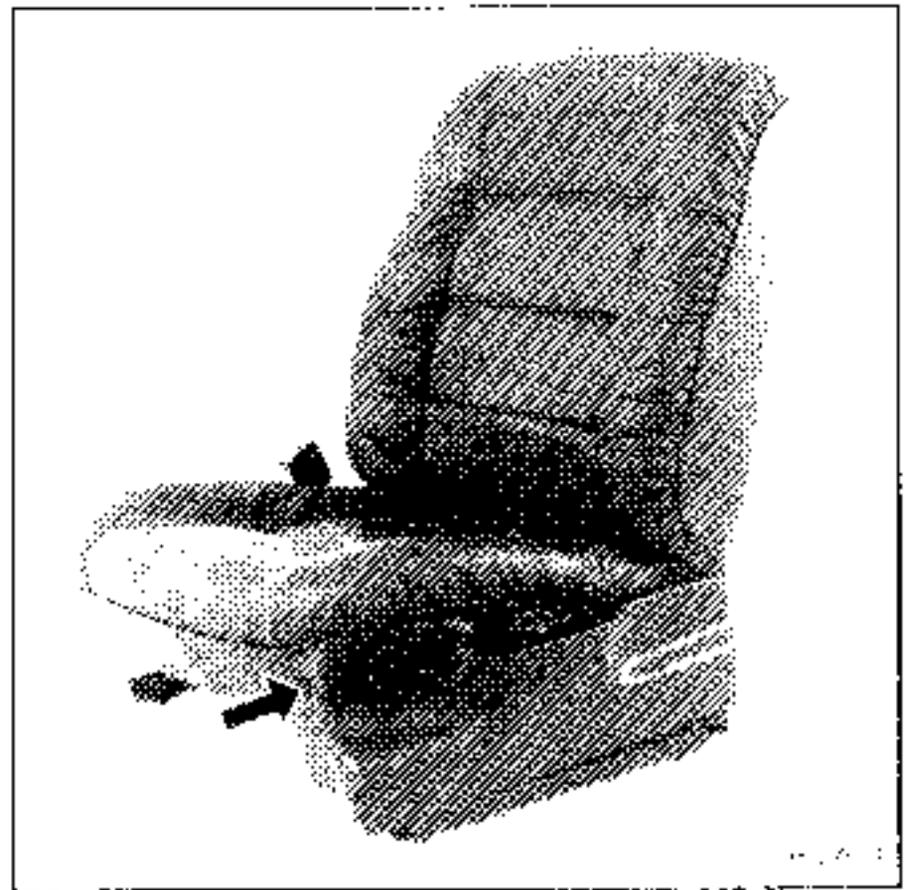


Remove the slideway cover

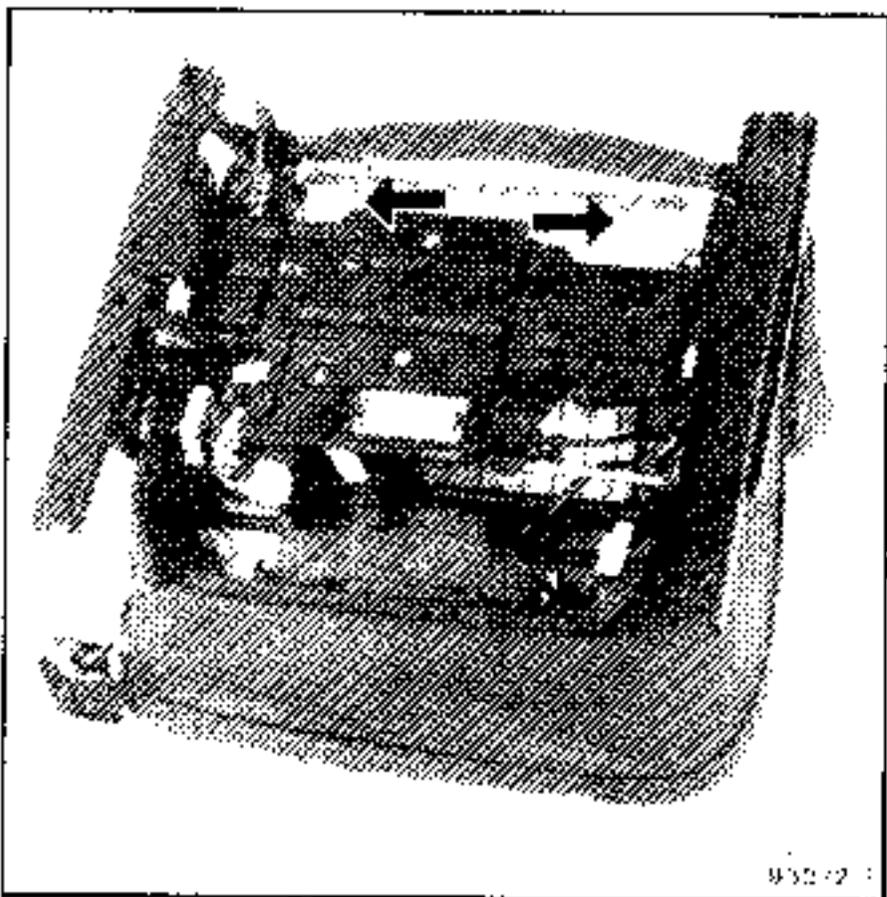


Cut the fixing clips off.

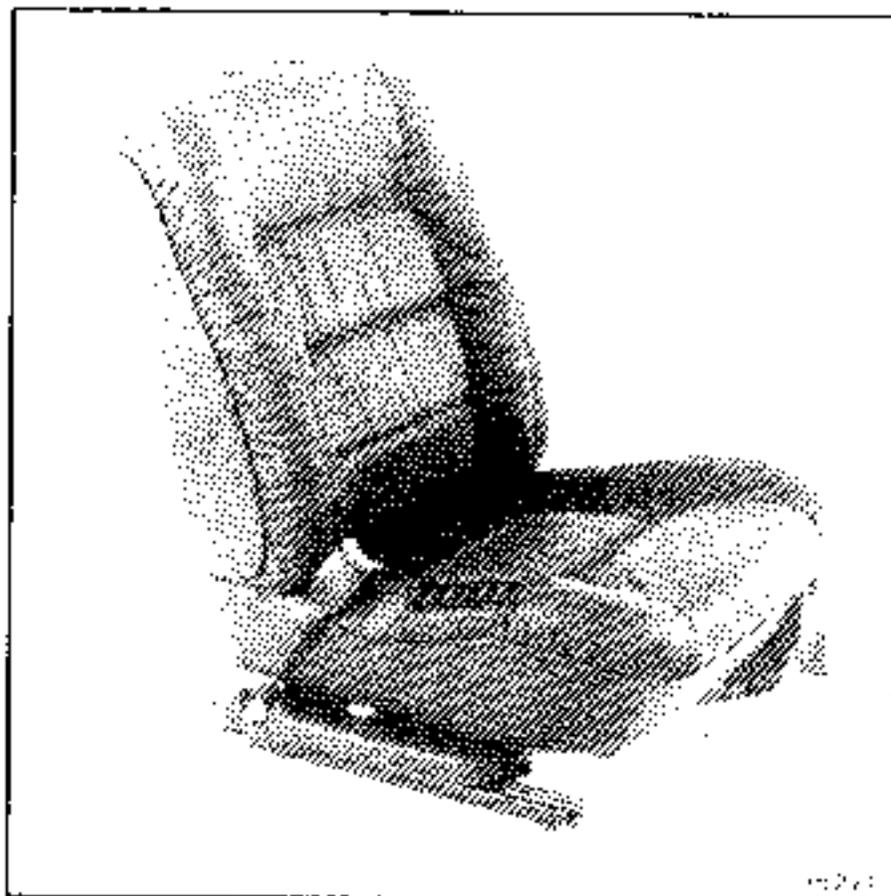


Unclip the control surround

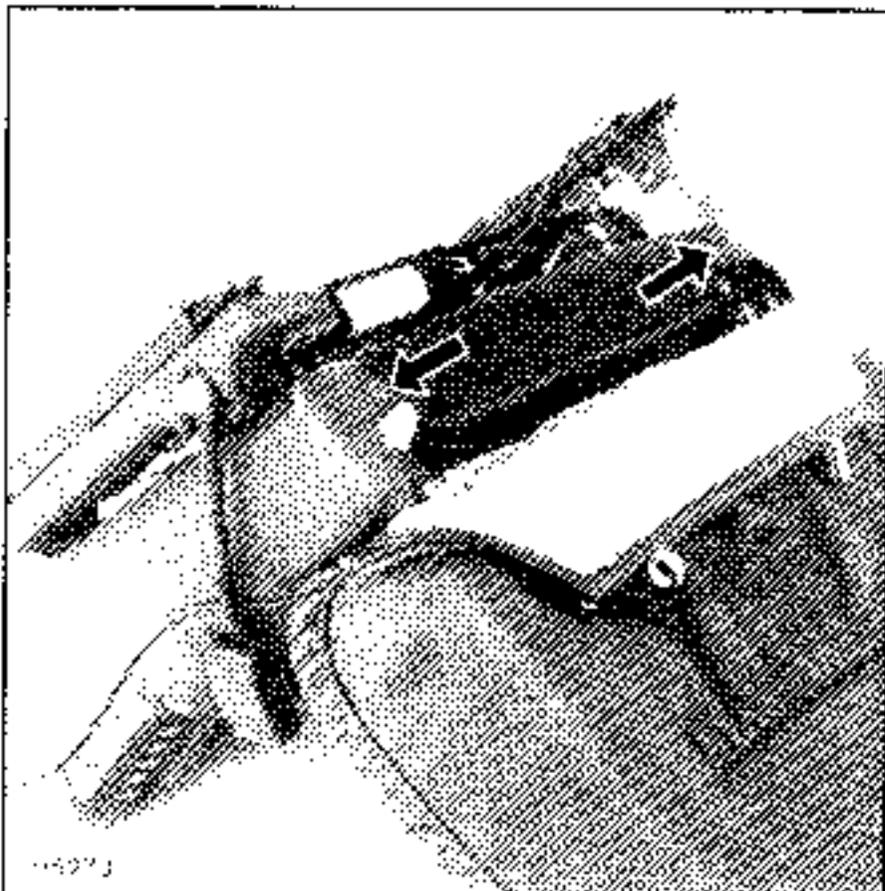


Take out the two hooks and unhook the outside edge of the trim

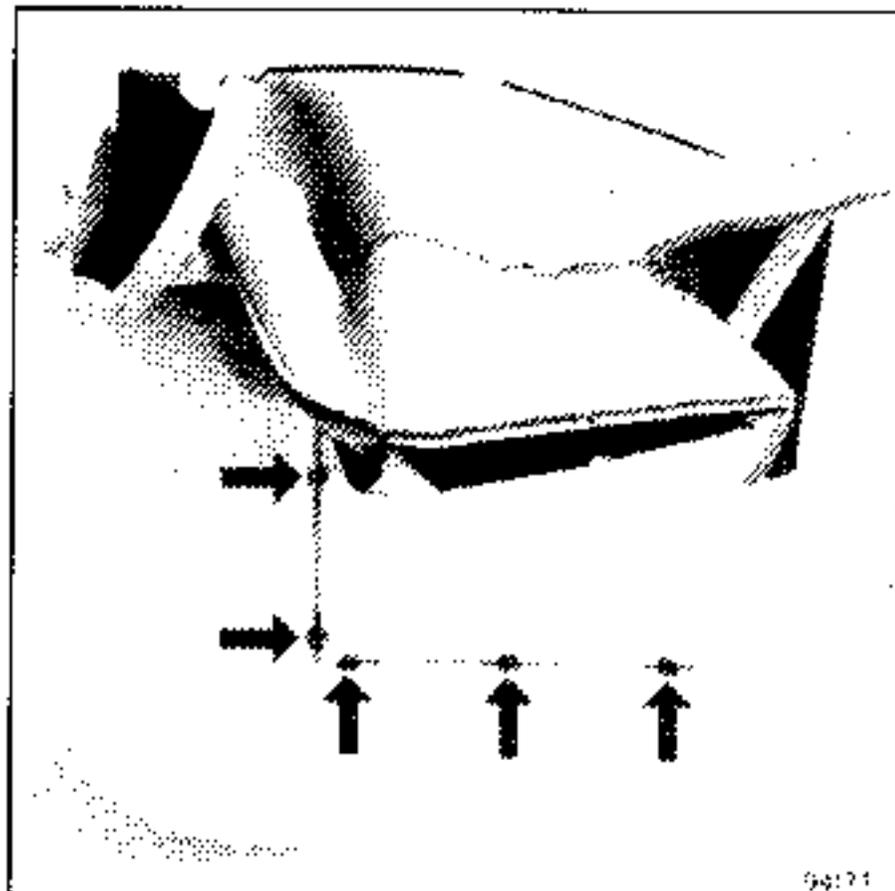


Cut off the fixing clips

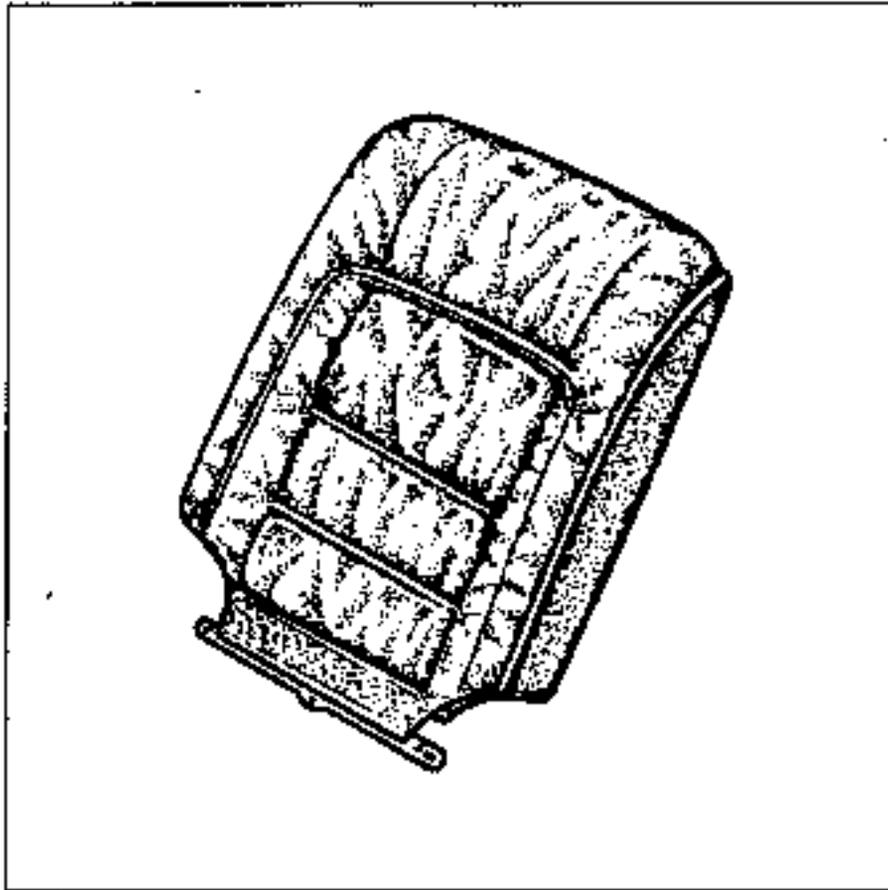



REMOVAL

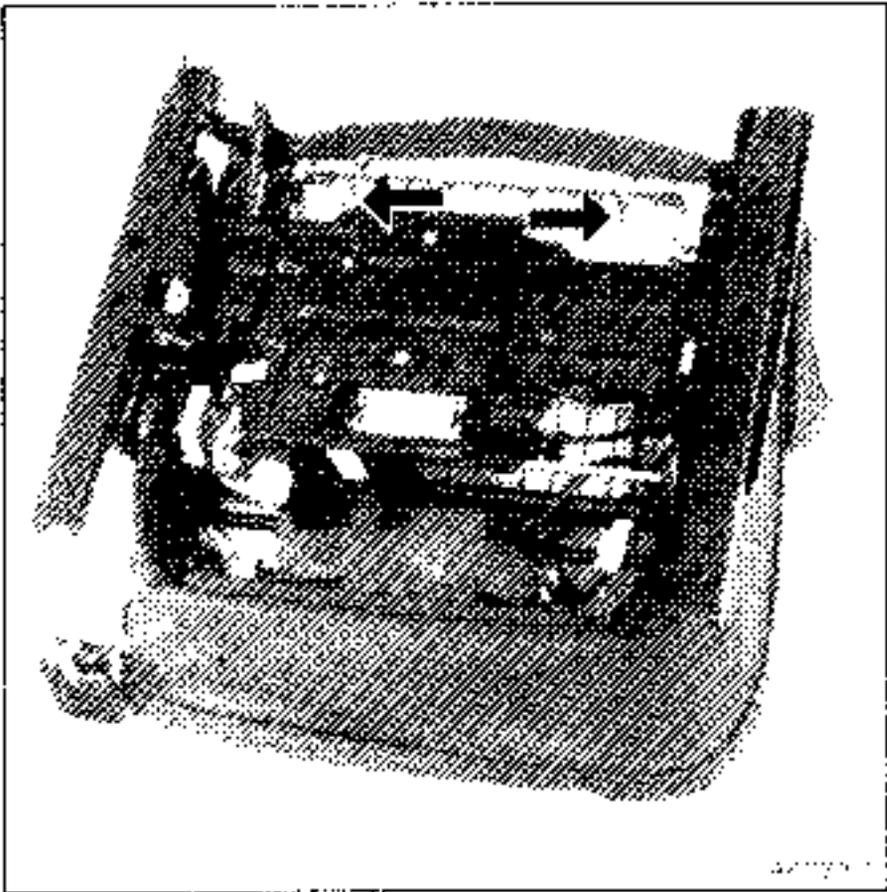



Remove the seat and unhook the hooks

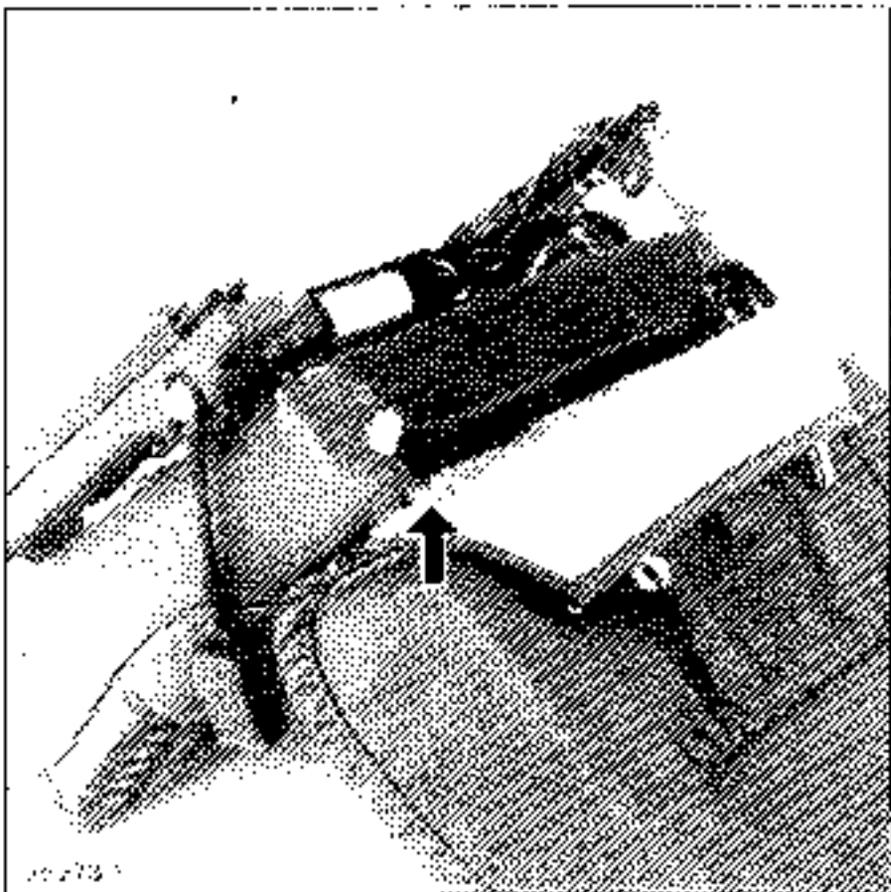

Remove the three retaining clips.

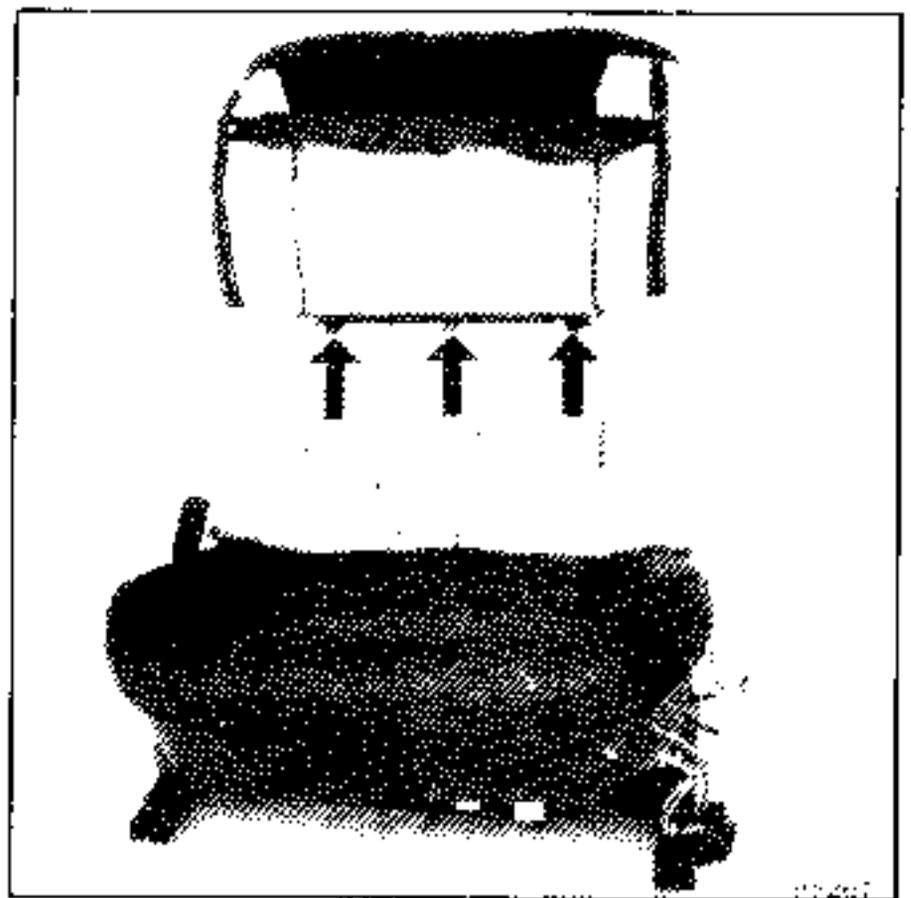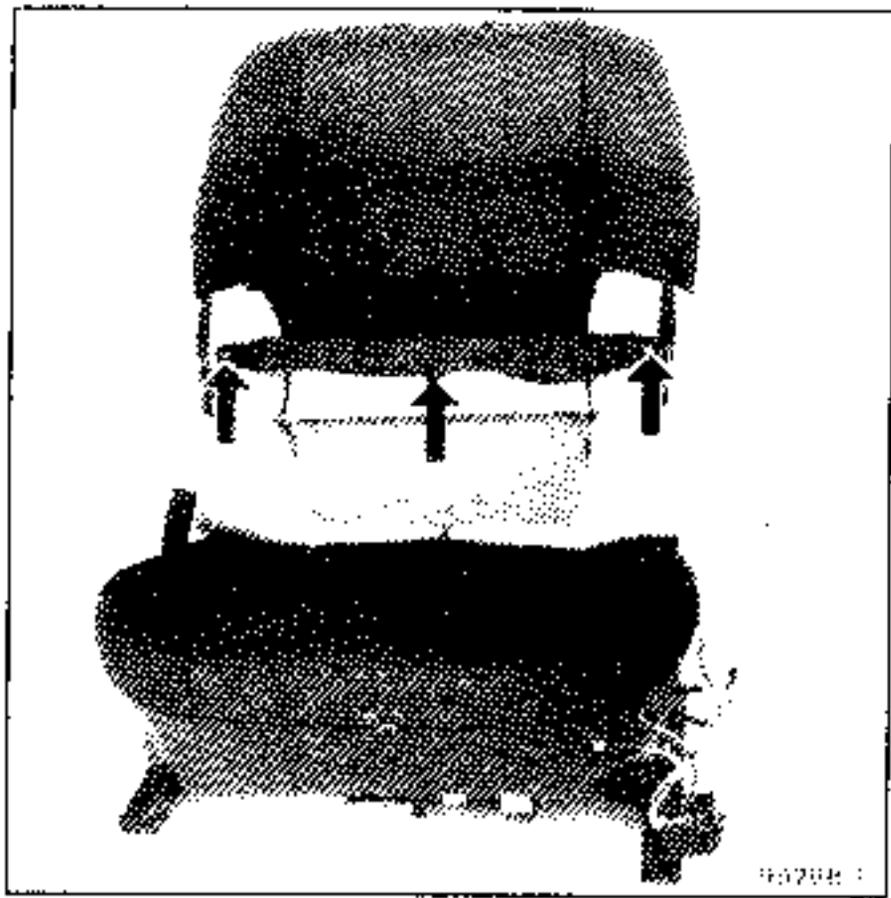


Refit the trim and cut the hooks.

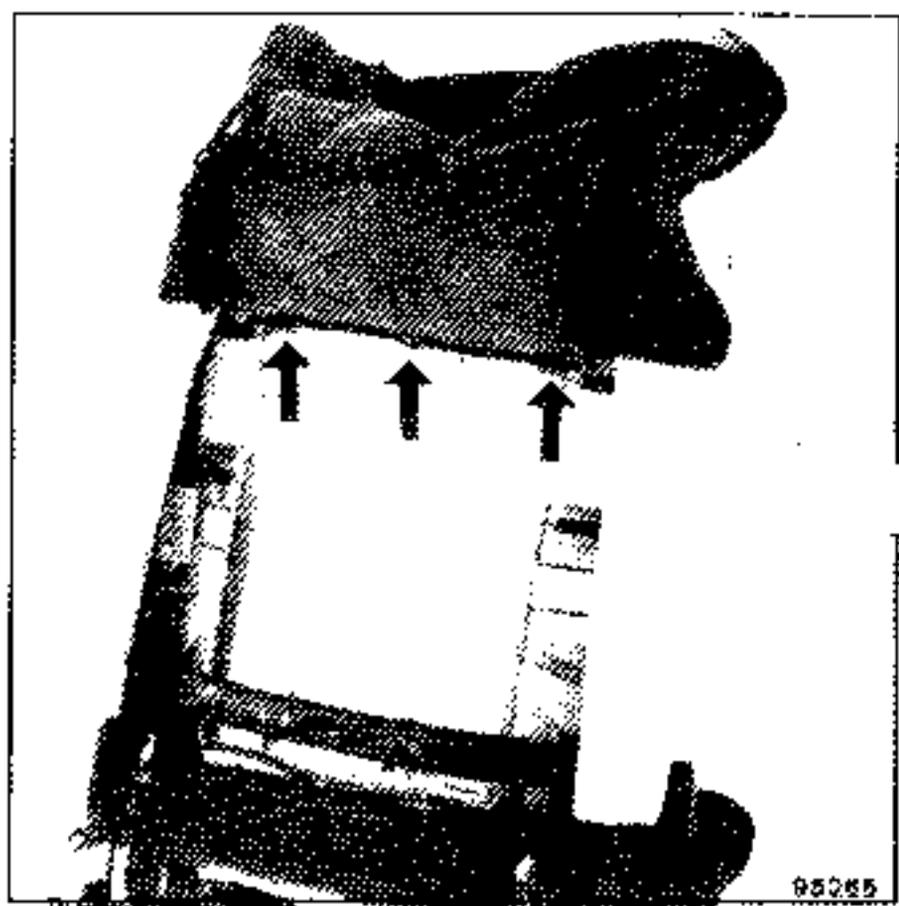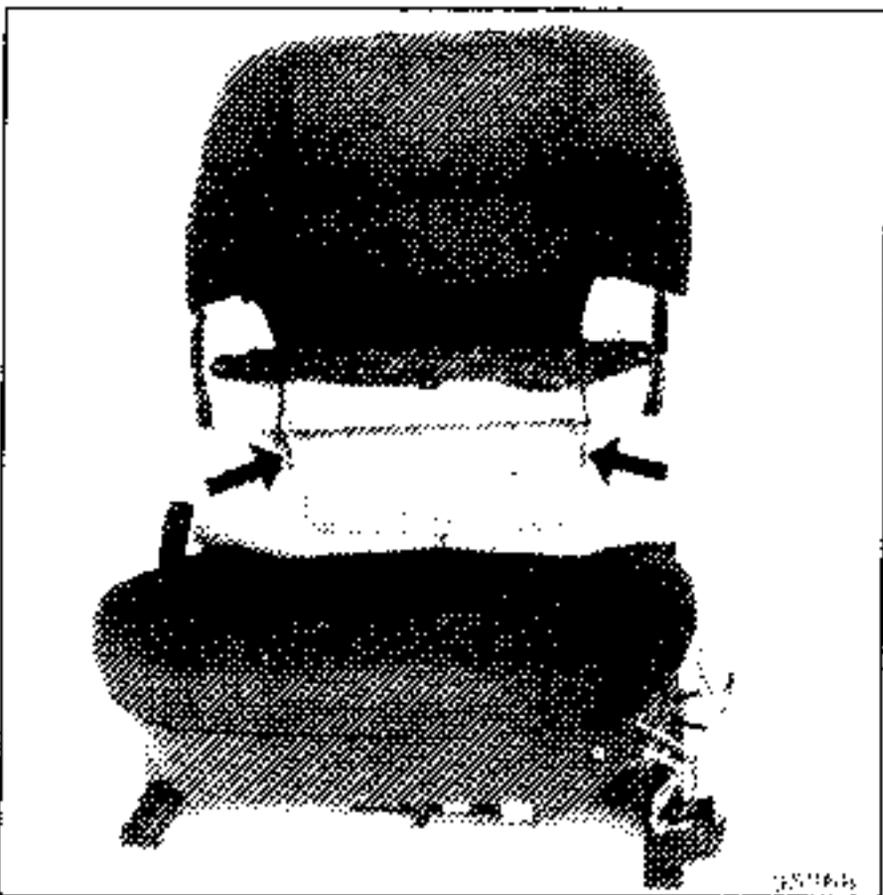


Cut the fixing clips


Cut the fixing clips

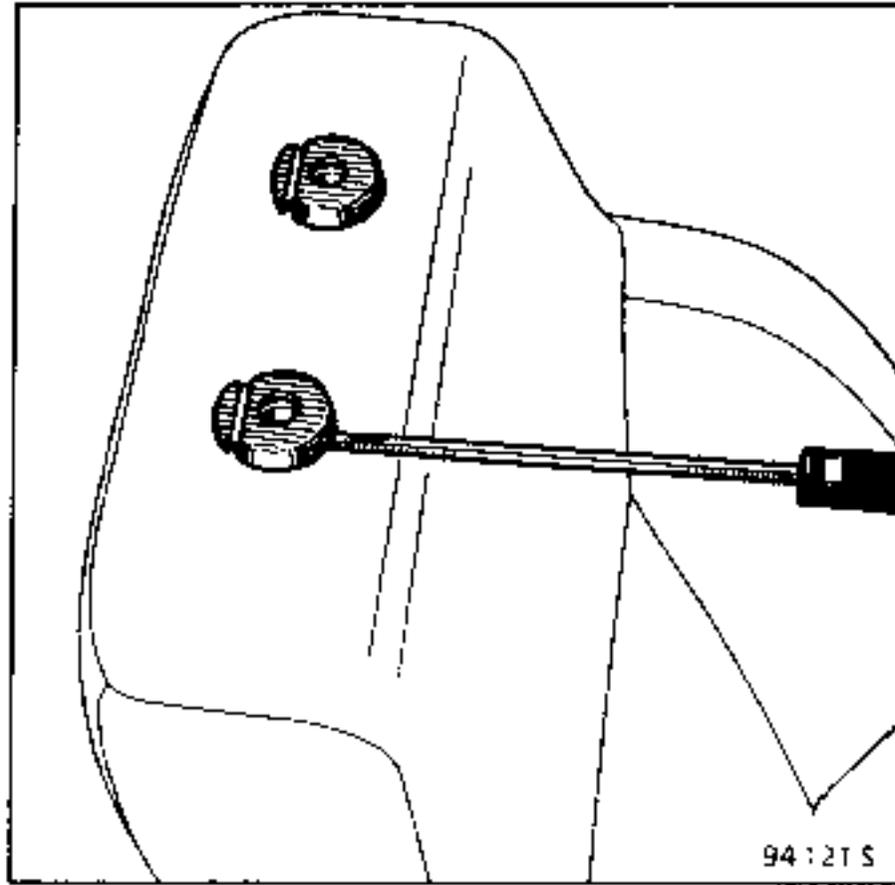


Remove the upper head restraint guides.

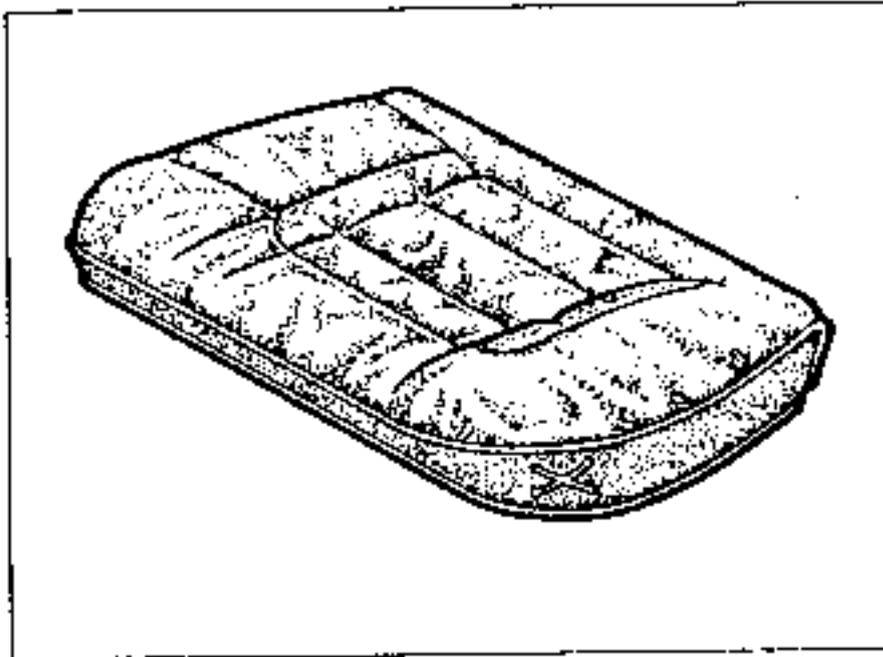


REMOVAL

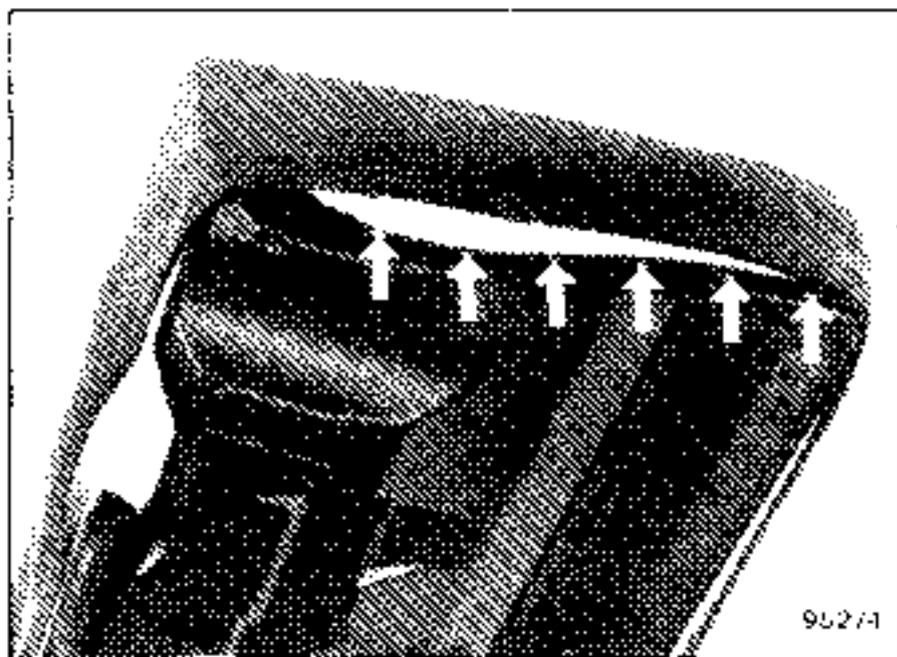


Unhook around the edge of the trim

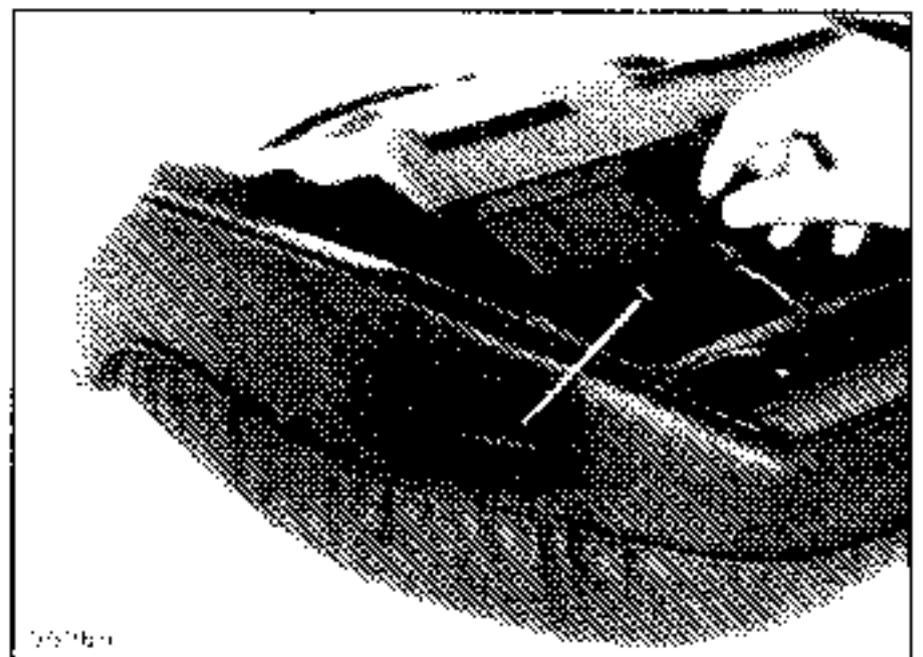


Unclip the plate

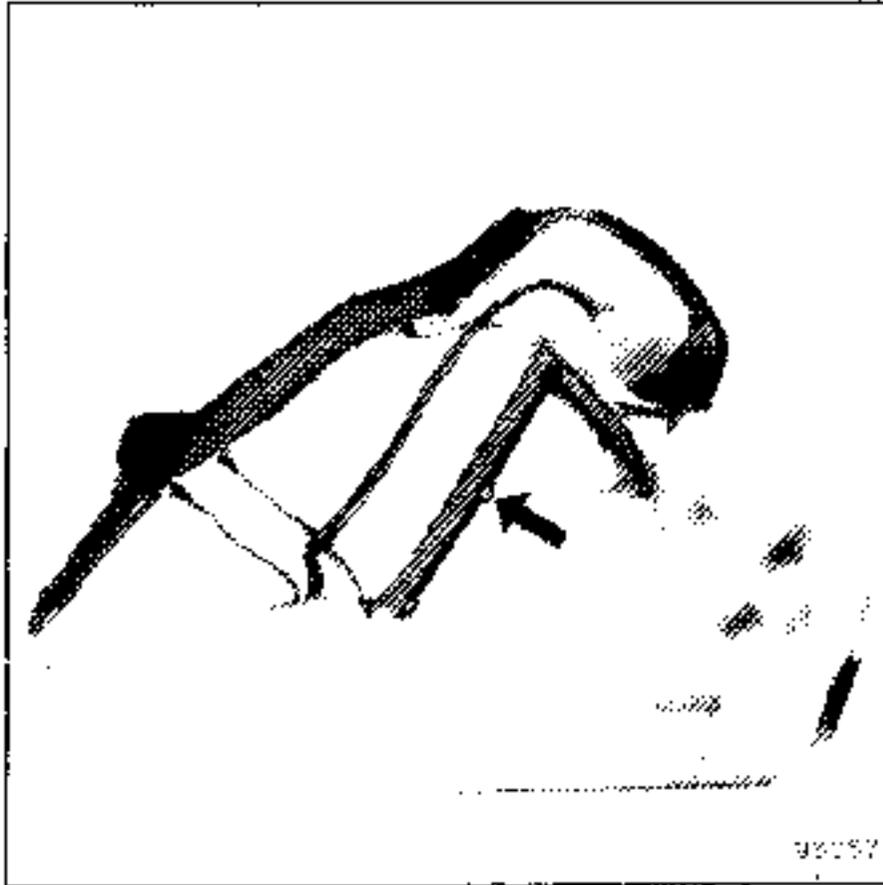


Cut the fixing clips

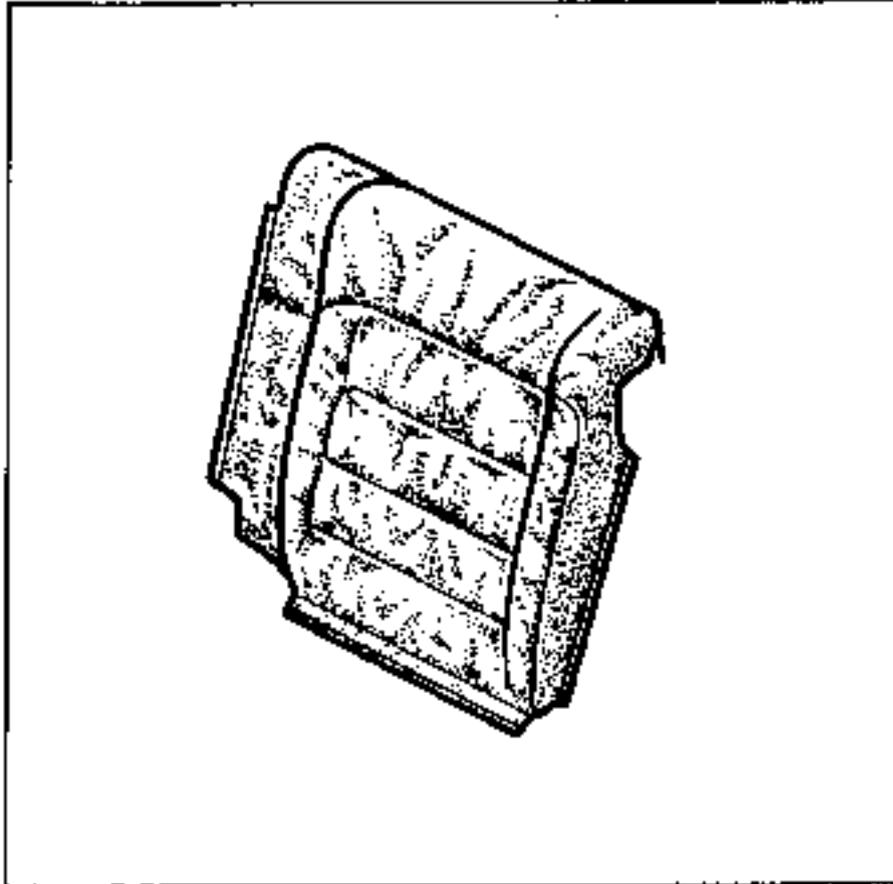


REMOVAL

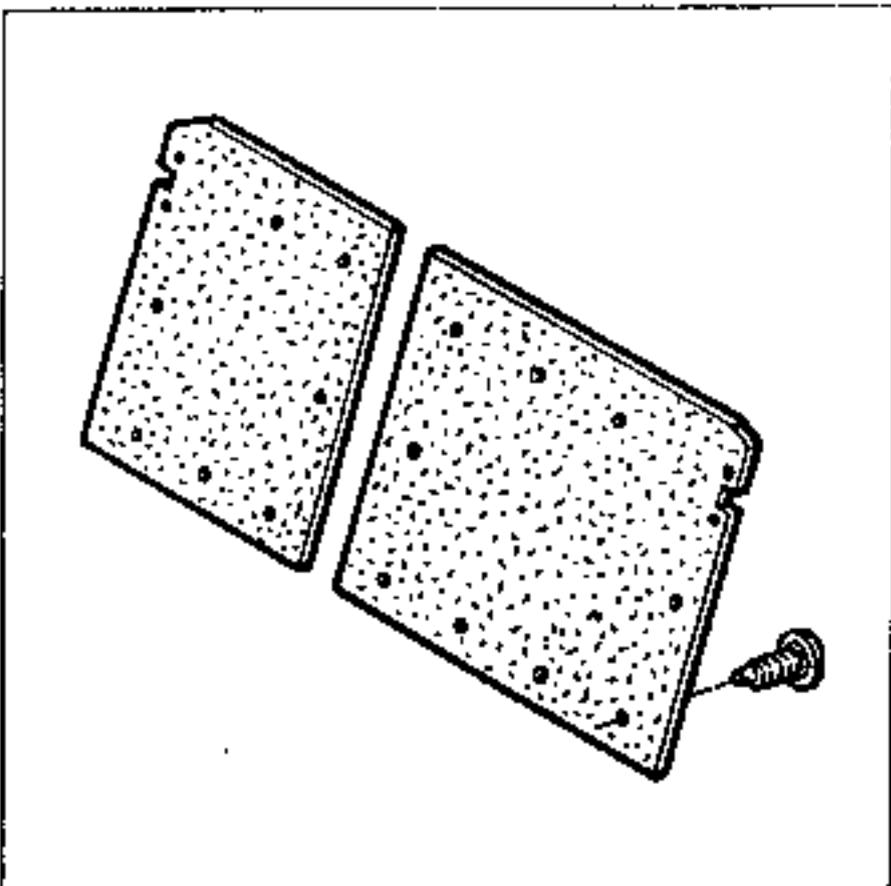


Remove the seat and remove the rear trim.

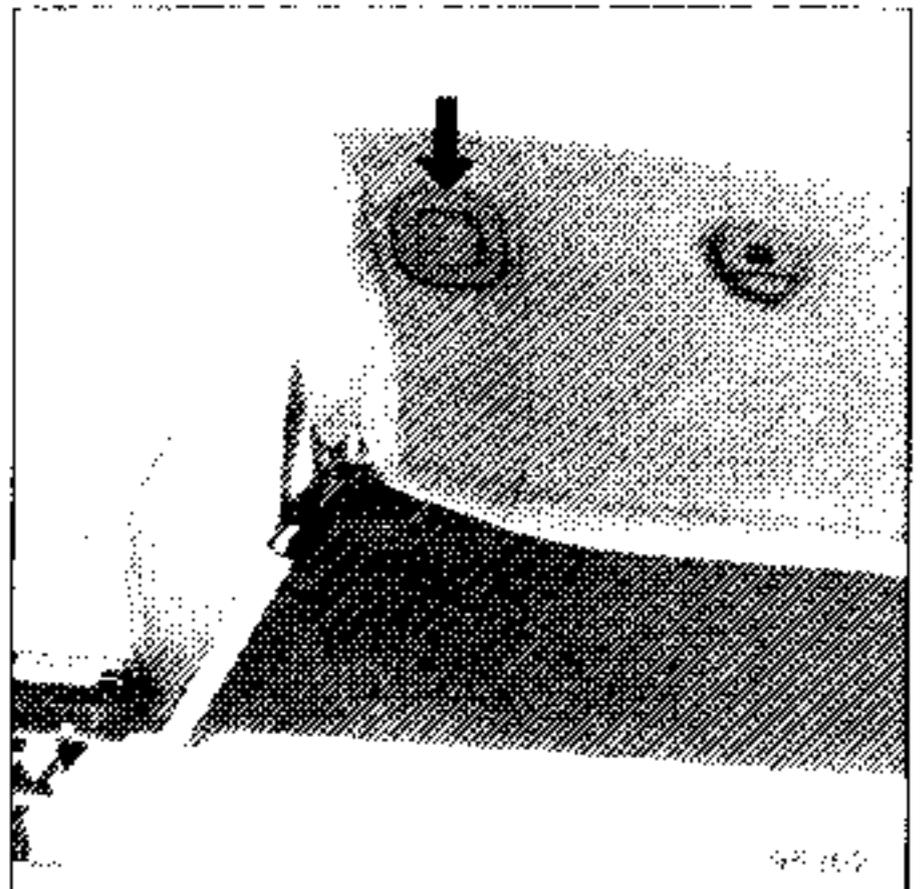


Carefully unclip the edge of the trim.

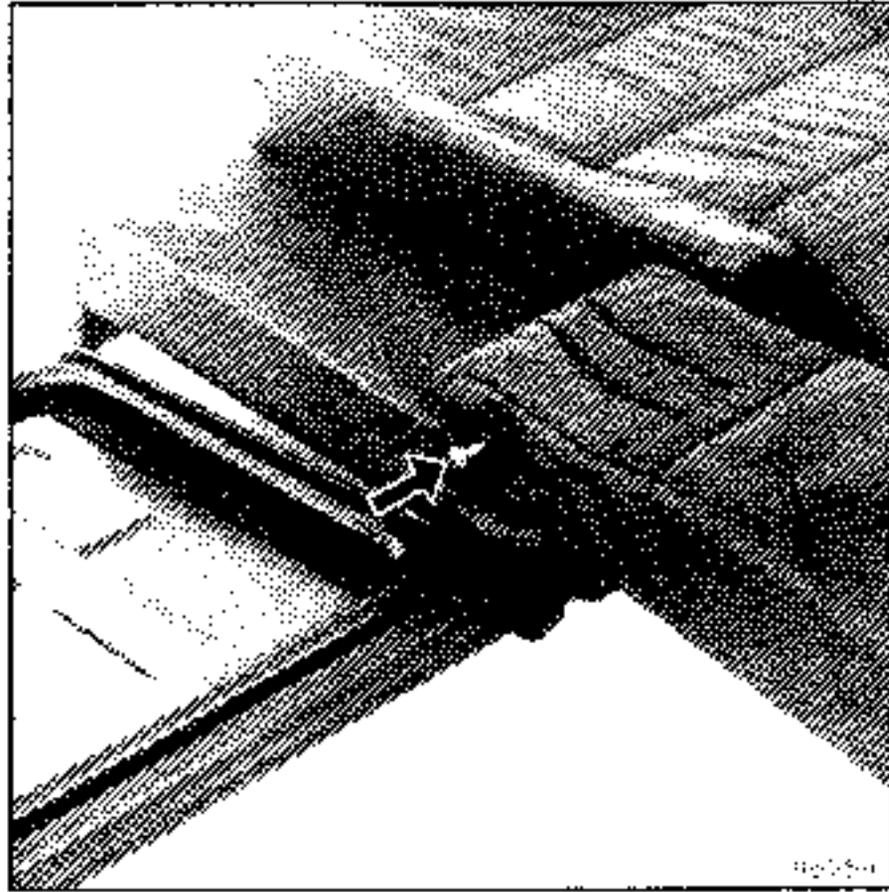


Cut the fixing clips.

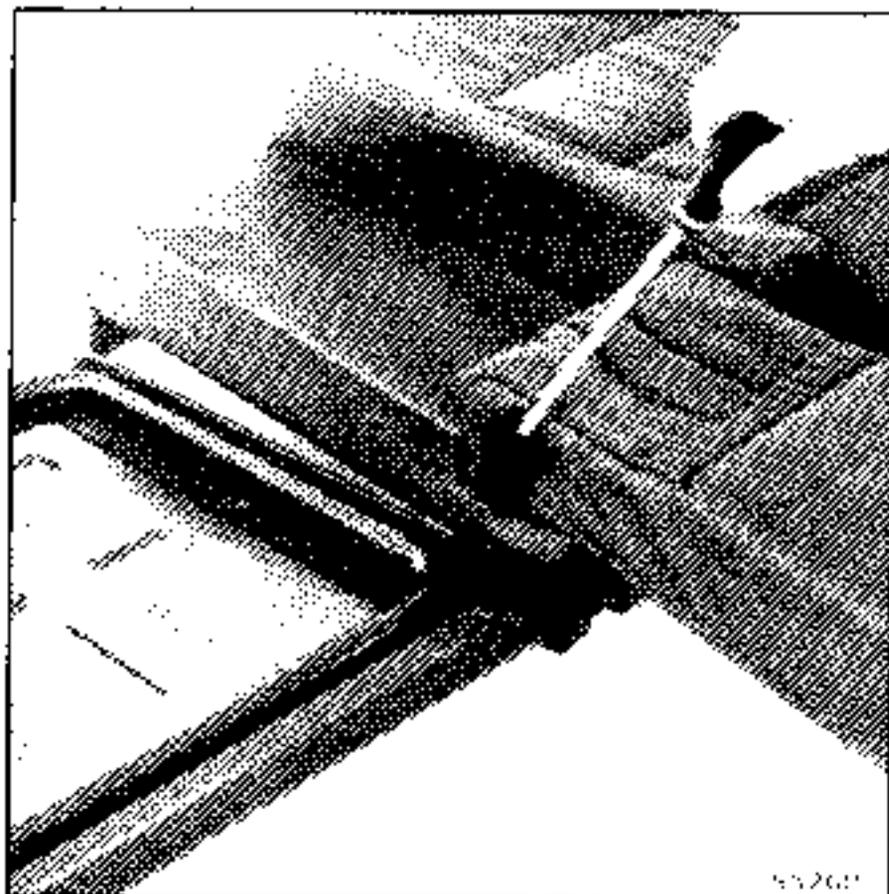


Remove the centre arm rest

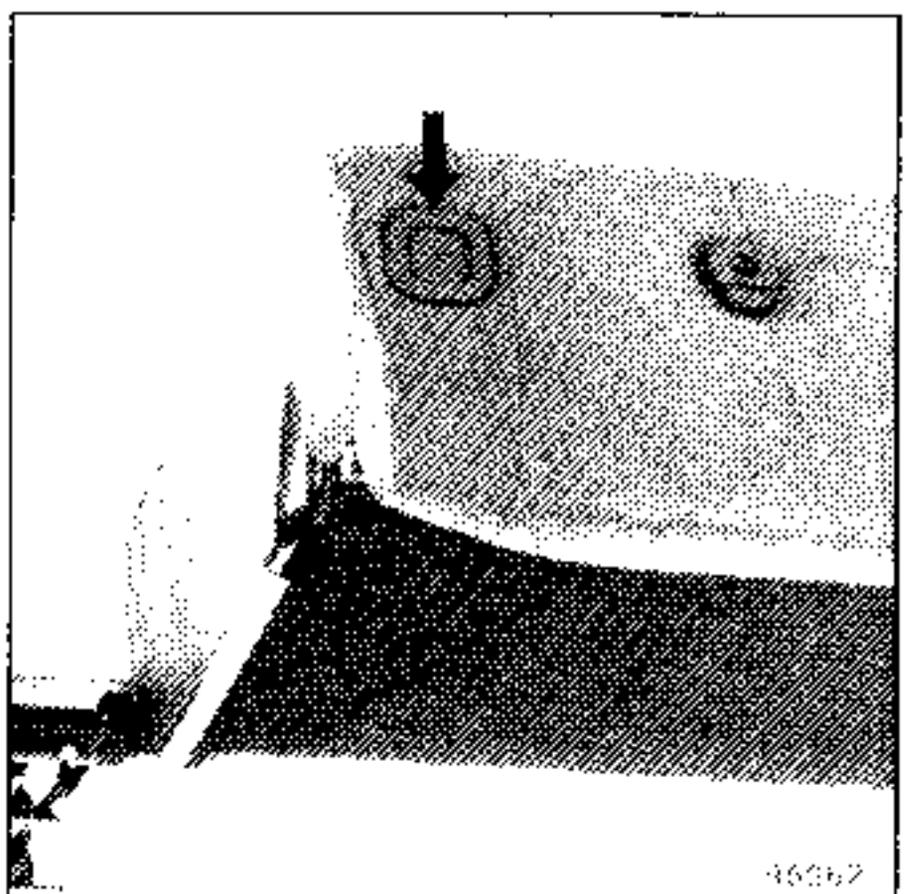


Remove the upper head restraint guides and unclip the seat unlocking button.

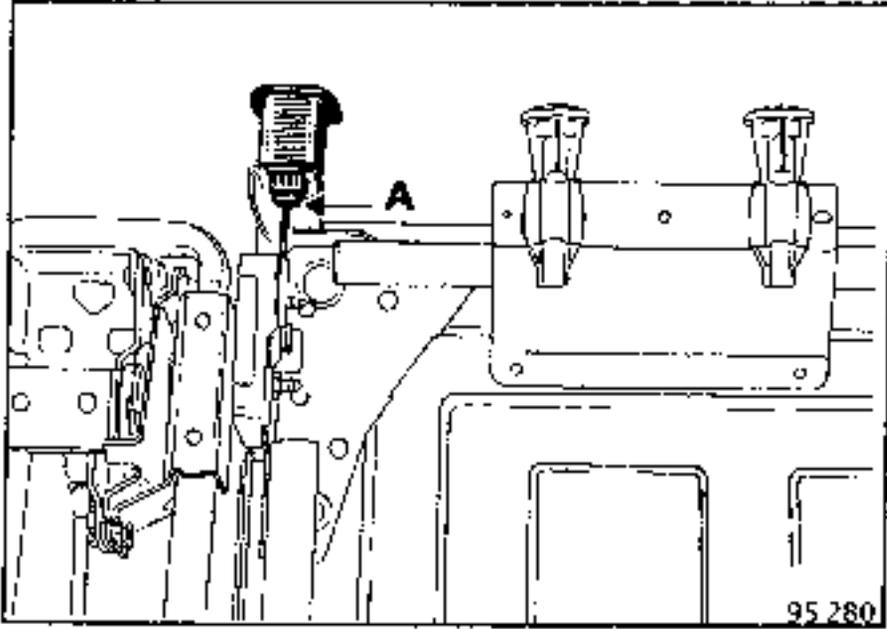

Press the tabs (A)

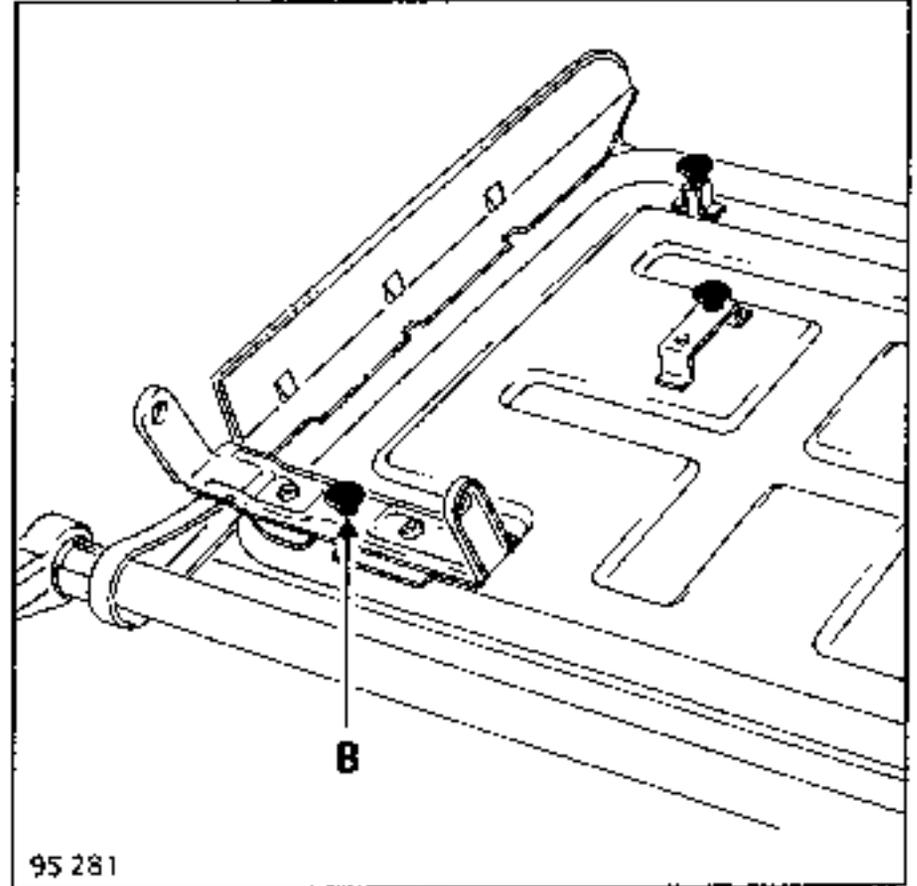

To pull out the central section, remove the clips (B).

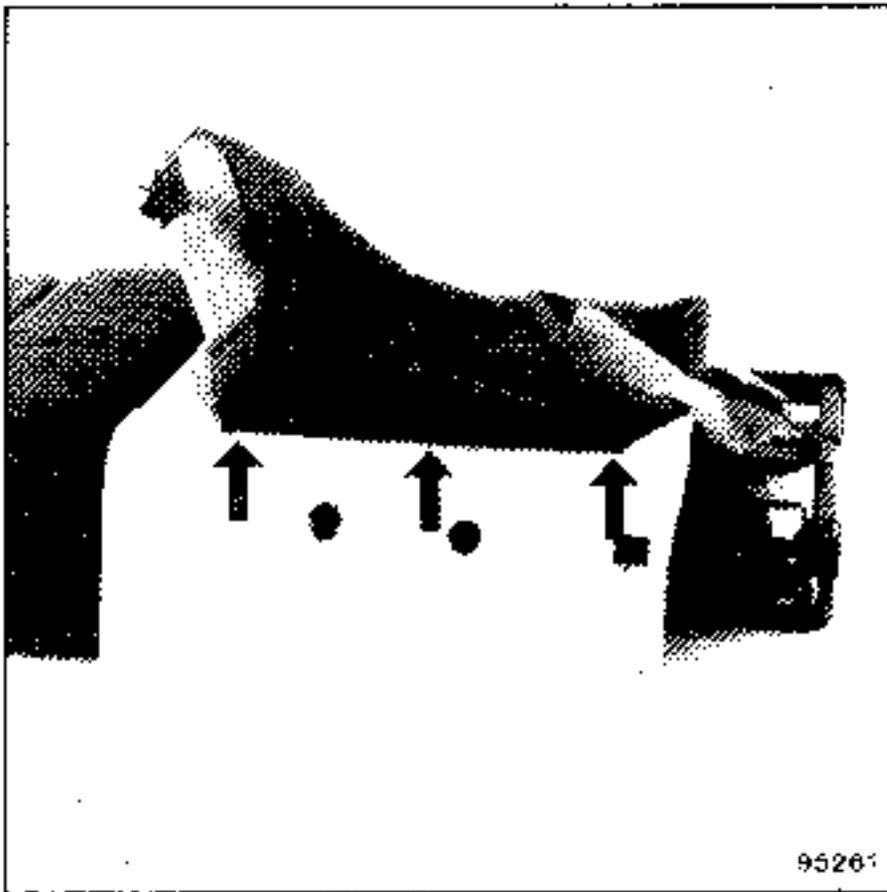

Cut the fixing clips.