


The humidity sensor is located in the micro-turbine.

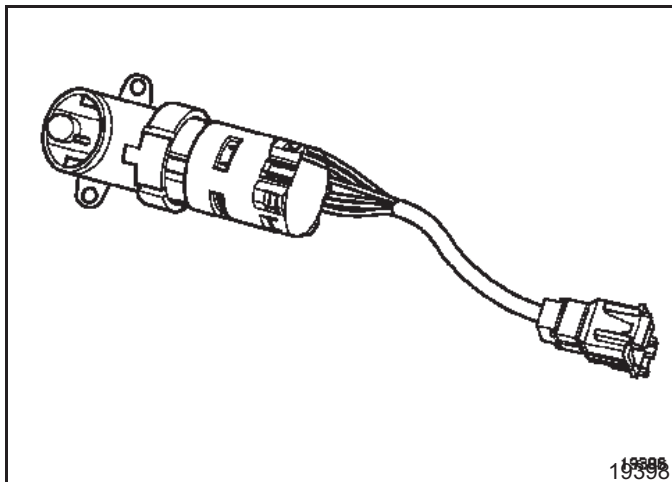


The sensor measures the humidity in the passenger compartment.

It is a capacitive sensor: the resistance changes with humidity.

LOCATION

The sensor is located in the courtesy light.

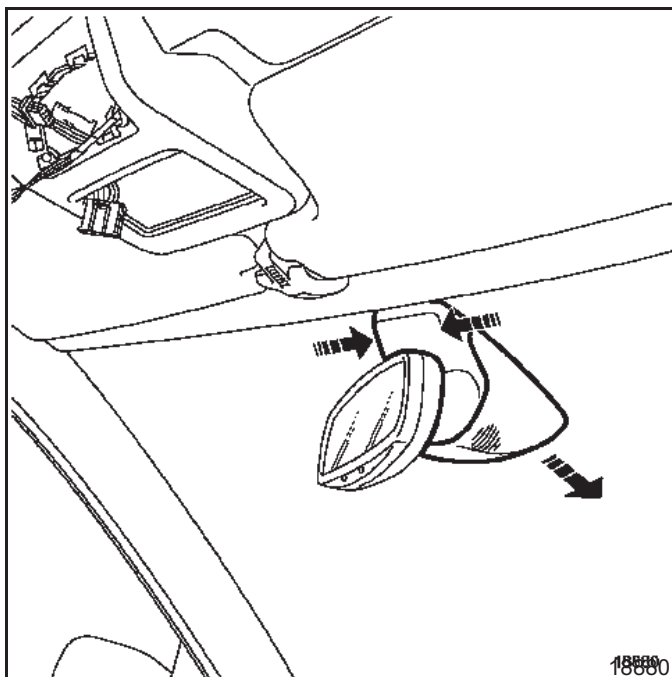

REMOVAL

Remove:

- the courtesy light cover,
- the two mounting bolts of the micro-turbine,
- the micro-turbine assembly.

Disconnect the wiring.

REFITTING

Proceed in the reverse order to removal.